




User Guide

Retro Corded Home Phone

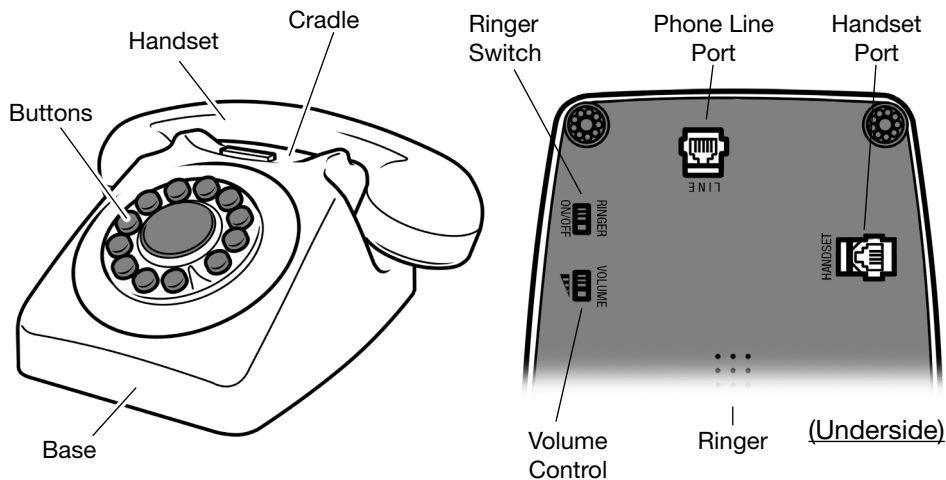

Setting Up The Phone

Connect the handset cable to the handset port on the base and place the handset on the cradle. Connect the phone line cable to the phone line port on the base and the other end to your phone outlet.

Making A Call

Pick up the handset, dial the required number and wait to be connected.

Ending A Call

Place the receiver back on the cradle to end the call.

Refusing A Call

Pick up the receiver and place it back on the cradle.

Handset Volume

Use the volume control slider to increase or decrease the handsets volume output.

Ringer Volume

You can enable or disable the ringer with the on/off switch for the ringer, located on the base of the phone.

Contents & Features

Contents

- 1 x Retro Corded Home Phone
- 1 x Extension Cord

Please Note:

For use in Ireland you will need a BT432A to RJ11C adaptor

Features

- Button Face Dial
- Pulse or Tone Dialing
- Ringer On/Off
- Hand Set Volume Control

Specification

Retro Corded Home Phone

Telecommunications Socket: BT431A
Telecommunications Handset: RJ11C
Dialing Mode: Pulse and Tone
Dialling Method: Button
Approximate Dimensions: 135mm x 105mm x 210mm
Approximate Weight: 1.1Kg

After Sales Support

UK/N.IRELAND HELPLINE N^o: 01270 508538
REP.IRELAND HELPLINE N^o: 1800 995 036
WEBSITE: www.qesh.co.uk
EMAIL: enquiries@qesh.co.uk



Warranty Certificate

Warranty

This product is warranted to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits covered by this warranty are in addition to all rights and remedies in respect of the product the consumer has under existing U.K. laws.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase receipt as proof of purchase and as proof of the date of when the purchase was made. The receipt must be presented with the warranty card when making a claim under this warranty.

Service during the Warranty Period

Please ensure the product is properly packaged so as to ensure that no damage occurs in transit. Also make sure that you have included a detailed explanation of the problem.

Extent of the Warranty

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not extend to accessories.

Normal Wear and Tear

This warranty does not cover normal wear and tear of the product or parts.

Exclusions

This warranty does not cover the following:

- Any defect caused by accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has been damaged by lightning strike either directly or indirectly, or on a mains or vehicle outlet power surge or liquid ingress.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- The product if it is located outside of the U.K. and Ireland
- Any damage caused by improper power input or improper cable connection.

This warranty does not affect your statutory rights.

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.qesh.co.uk
EMAIL: enquiries@qesh.co.uk



