 


#### REMOTE CONTROL FUNCTIONS

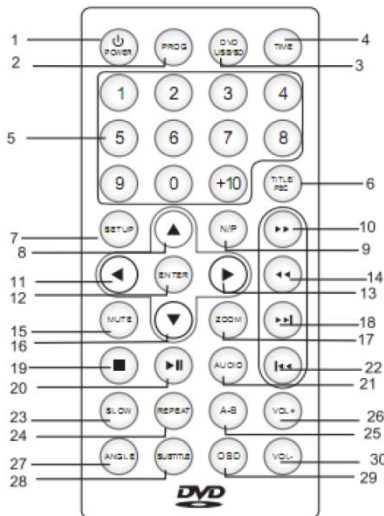 


- |                 |                 |
|-----------------|-----------------|
| 1 Power         | 16 Down arrow   |
| 2 Program       | 17 Zoom         |
| 3 DVD/USB/SD    | 18 Next         |
| 4 Time          | 19 Stop         |
| 5 Numeric keys  | 20 Play / pause |
| 6 Title / PBC   | 21 Audio        |
| 7 Setup         | 22 Previous     |
| 8 Up arrow      | 23 Slow         |
| 9 N/P           | 24 Repeat       |
| 10 Fast forward | 25 A-B repeat   |
| 11 Left arrow   | 26 Volume +     |
| 12 Enter        | 27 Angle        |
| 13 Right arrow  | 28 Subtitle     |
| 14 Fast rewind  | 29 OSD          |
| 15 Mute         | 30 Volume -     |


#### DVD FUNCTIONS

Please Note The DVD Player Is Built Into The Master Unit

- 1 Infra-red
- 2 DVD/USB/SD
- 3 Setup
- 4 Ok
- 5 Direction Keys
- 6 Stop
- 7 Repeat
- 8 Power
- 9 Charge
- 10 LCD Display

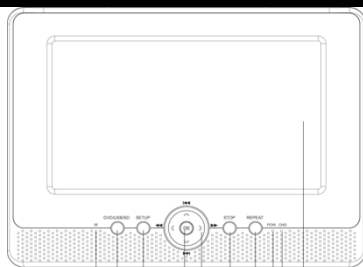


 - 11 Charge / Power ON
- 12 Volume Control
- 13 DC In Jack
- 14 Earphone Jack
- 15 Coaxial
- 16 AV Out jack
- 17 USB Port
- 18 SD/MMC Port

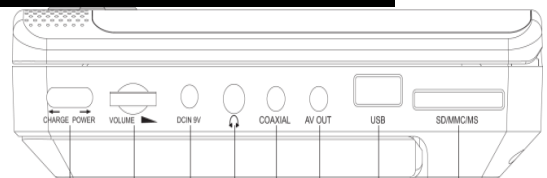

1 2 3 4 5 6 7 8 9 10

 11 12 13 14 15 16 17 18

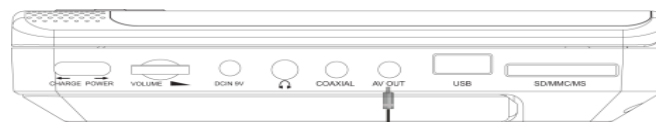

Using the supplied AV cable connect your portable DVD player to any TV unit



#### ACCESSORIES



Remote Control



All In One Carry Case



Power Cable



2 Sets Earphones



Mains Power Adaptor



In Car Charger



2 Smart Mount Headrest Bracket



AV Cable



AUX Cable

#### DVD OPERATION

1. Before use, open the disc cover and carefully remove and discard the white card tab from inside the deck.
2. Remove all transparent protection film from the player, including the display screen.
3. Ensure the "Charge / Power" switch on the right-hand side of the player is set to charge.
4. Connect the mains power adaptor to the DC-in socket and charge fully for 6 hours.
5. Once the player is fully charged slide the "charge / power" switch to "power", open the disc cover and carefully insert a DVD (label side facing up) until it clicks into place. Close the disc cover and the DVD will load automatically.
5. Your DVD Menu screen will appear. Use the directional arrow keys and enter button for your required selection.
6. Please refer to your user manual for a list of compatible disc playback formats.

#### USB / SD Mode

1. The USB input and SD/MMC card slot can be used for movie, music and photo playback.
2. Insert either a USB device or SD/MMC card into the relevant slot at the side of the player.
3. If media is inserted in both the USB port and the SD/MMC card slot then you can select which input source you require by pressing the MODE button on the remote control or the DVD/USB/SD button on the DVD player. Use the directional arrow keys to highlight your selection and press OK to confirm.
4. Please refer to the user manual for a list of compatible formats.

#### Maintenance & care

If used correctly and handled with care, this DVD player will serve you for many years. If however, you should experience any difficulties, please call our customer support team on the number below.

For full instructions, please refer to the user manual