



DAB AND FM RADIO



Now you have purchased a Tevion® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated helplines and web support

AFTER SALES SUPPORT

UK/N.IRELAND HELPLINE NO 01270 508538
REP. IRELAND HELPLINE NO 1800 995 036
WEB SUPPORT WWW.QUESH.CO.UK

MODEL NUMBER: **44149**

1. Contents
2. Welcome Section
3. General Information and Safety Instructions
4. Controls
5. Instructions
6. Warranty Card
7. Fault Report Card

Congratulations on choosing to buy a Tevion® product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of Europe's leading manufacturers.

All products brought to you by Tevion® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 year warranty.

We hope you enjoy using your purchase for many years to come.

This DAB radio can be powered by 6 x AA batteries.

Do not dispose of batteries in your household waste.



 
 
 
Please contact your local authority for details on safe disposal.

- Never throw batteries into a fire or expose to excessive heat sources.
- If batteries are swallowed, please seek immediate medical attention.
- Always ensure correct +/- polarity when installing batteries.
- Do not recharge non rechargeable batteries.

Electrical and electronic equipment (EEE) contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) is not disposed of correctly.



Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

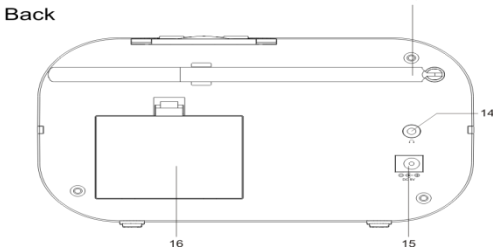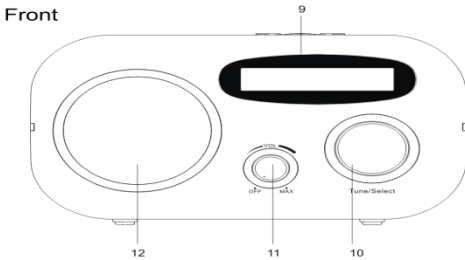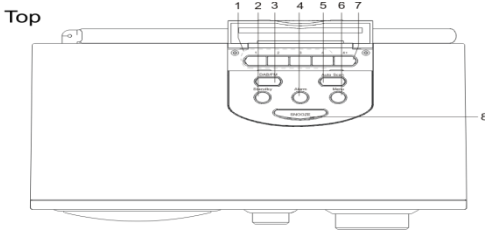

1. Preset Keys (1-4 / 5-8)
2. Standby
3. DAB/FM Key
4. Alarm key
5. Auto Scan Key
6. Info Key
7. 4+ Key
8. Snooze Key
9. LCD Display
10. Tune/Select Dial
11. Power/Volume Dial
12. Speaker
13. Telescopic Antenna
14. 3.5mm Earphone Socket
15. DC Power Socket
16. Battery Door
(6 x AA-Size Batteries)

1. Switching your radio on for the first time

1.1 Power Supply

1.1a Main Adaptor (supplied with the package)

Connect the mains adaptor to the DC power socket of the radio to the wall socket.

1.1b Battery (not supplied)

Open the battery door and insert 6 "AA " size alkaline batteries.

Remark: Insert batteries correctly. Pay attention to the +/- Pole.

1.2 Extend the aerial as far as it can go.

1.3 The radio will automatically show.



1.4 Then show automatically:



 
1.4.1 If there is no DAB signal the display will show below, before you scan the DAB stations you can choose "CANCEL" to skip the search the display will then show "NO SERV"



1.5 During scan mode, the LCD will display a slide bar that indicates the progress of scan and the amount of radio stations that have been found so far.



1.5.1 Once the scan has finished, the radio will select the first alphanumerically found station.



If you can't hear any sound, then turn the volume control clockwise until you reach a desired level.

To explore the stations that have been found, you need to turn the "Tune/Select" button anti-clockwise or clockwise. Every time you turn the tune knob, you will skip to the next found station. When you find a station that you would like to listen to, then press the "Select" key, or after 5 Seconds, it can auto select the current station which will show on the LCD .

1.5.2 There is no DAB signal, you can find the station information which you have previously listened to, it will display as "OFF AIR"



2. Memory

When you switch on the radio, the radio will play the DAB mode with the station that was in last operation or the FM radio that was last in operation.

3. DAB Mode

3.1 Storing Stations

You can store up to 8 of your favorite stations to the preset keys, this will enable you to access your favorite station at the touch of one button. To store a preset, you must first be listening to the station that you would like to save, then press and hold one of the presets labeled 1-4 for 2 seconds. The LCD will then show " **P# SAVED** ".

If you want to save Radio 2 to Preset 5, you should press and the " 4 + " Key to switch the Preset 1-4 to Preset 5-8 station, then press and Hold the number 1 button at the same time until " **P# SAVED** " appears in the display.

 


3.2 Recalling a stored station


Once you have saved a station to one of the presets, you can recall it by pressing and releasing the corresponding preset key, e.g. if you saved Radio 1 to Preset 1, then just press the number 1 preset key. If you press a preset that hasn't been allocated a station, then it will display "EMPTY".

If you want to call "preset 5", you should press and hold the "4 + " key, and then press number 1 button.


3.3 Display mode

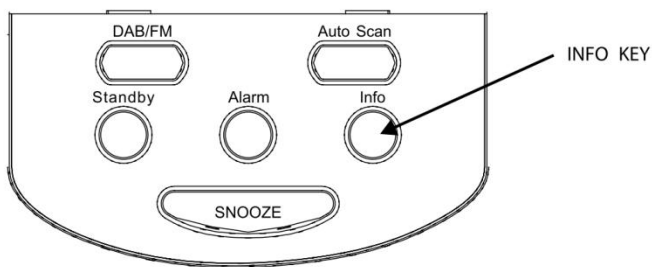

 When you press the “Info” button, the display will cycle through the following display modes

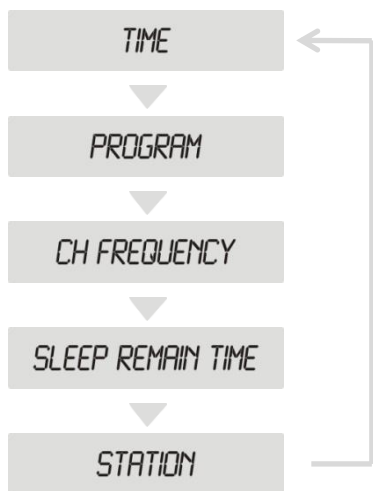

 You can hold the “INFO” key to enter the “MENU” mode and press the “INFO” key to browse the menu.

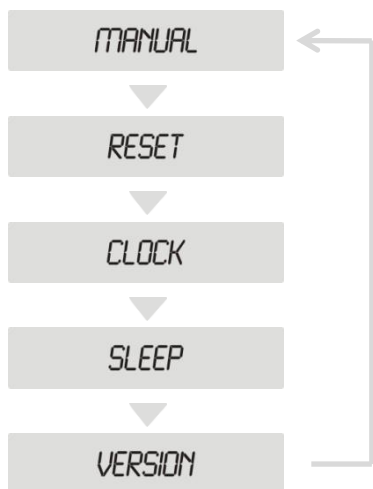

3.3.1 Signal strength

The slide bar indicates how strong the received signals are, the stronger the signal, the longer the bar will be from left to right.



SHOW THE SIGNAL STRENGTH

If the signal level drops below the fifth box (minimum signal level) then you may experience problems with the quality of the audio.

Note: This signal strength is only for indicating DAB stations strength.

3.4 Advanced display modes

3.4.1 Auto scan modes

There are two types of auto scan, one LOC scan and the other is FULL scan. LOC scan searches the UK DAB band III and FULL scan searches all band III DAB channels.

To activate the LOC scan press the "Auto scan" button and for FULL scan press and hold the "Auto scan" button.

3.4.2 Manual tune

As well as an auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

Press and hold the "Info" button, when the LCD display shows "manual". Then press the "Tune/Select" key to enter into manual tune mode. Now turn the "Tune/Select" button to move through the DAB channels, which are numbered from 5A to 13F.

3.4.3. Set clock

3.4.3.1 Under DAB mode, the clock will synchronize automatically and you do not have to adjust the clock manually. Turning the volume button to the 'off' position will turn the radio off and cause the clock to reset. Please set the clock again when you turn on the radio. The stored preset stations will not be affected. If the radio is in FM mode, the clock needs to be set manually by pressing and holding the "INFO" button, it will then show "RESET" press the "INFO" button again and it should show "CLOCK" press the "TUNE/SELECT" button and the hour number should be flashing, use the "TUNE/SELECT" dial to adjust to the correct time and press the "TUNE/SELECT" button to confirm.

3.4.3.2 AUTO CLK

The device will check the time automatically.

3.4.3.3 MANUAL CLK

Adjusting the tuning dial to set the hour and time. To confirm the change, press the "TUNE/SELECT" button.

3.4.3.4 SLEEP

To set sleep time from 05 to 60 minutes, choose OFF to close the "Sleep Time" setting.

3.4.4 Time

This will display the time on-screen.

3.4.5 CH Freq

This will display the current station frequency.

3.4.6 Station

This displays the name of the station they are listening to.

3.4.7 Version

This is the software version number. You may be asked for this number if you encounter problems and need assistance.

3.5 System Reset

Press and hold the "Info" button for 3 seconds. The display will show "RESET". There may be times when you need to reset your receiver back to its original factory settings i.e. when you move the radio to another part of the country. So that you can pick up the local & national DAB stations in that area. If you don't do this, then when you select a station on the radio, it may no longer be available.

Reset procedure

Press the "TUNE/SELECT" key to start the Reset.

Please note that once the reset has taken place, you will lose all of your stored presets both DAB and FM, and the internal DAB registry.

4. FM Mode

4.1 Switching from DAB to FM

In order to switch the radio from DAB to FM mode, you need to press the "DAB/FM" button once. The display will show :



4.2 Auto Scan

To search for FM stations, you need to press and then release the "AUTOSCAN" button. This will start scanning up the frequency band. To scan down / up the frequency band, you need to Turn the "TUNE/SELECT" key down/up first, then press the "AUTOSCAN" button. Once a station has been found, the scan will stop automatically. If no station is found, then the scan will stop once it has cycled through the entire FM band (87.5-108MHz).

4.3 When you press the "Info" button In FM mode, The display will cycle through the following options:

4.3.1 Clock

Refer to 3.4.3

4.3.2 Sleep Time

Refer to 3.4.3.4

Alarm Mode

5.1 Check Alarm Status

Under the condition of listening to the radio, press the “alarm” button, the LCD will display the alarm mode.

The LCD display shows the text "ALARM 1" in a digital, segmented font.

Turn the “Tune/Select” button to set ALARM 1 or ALARM 2

The LCD display shows the text "ALARM 2" in a digital, segmented font.

Press down the “Tune/Select” button, and turn the dial to select “OFF”, “DAILY” or “ONCE”. Choose “OFF” to disable the alarm and return to the radio function. Press down “TUNE/SELECT” button to Set Alarm’s repeat mode, turn “TUNE/SELECT” button to change repeat mode. “DAILY ” or “ONCE” .


The LCD display shows the text "DAILY" in a digital, segmented font.

5.2 Setting Alarm Time

1) Select “DAILY” or “ONCE” and Press down “TUNE/SELECT” button to Set Alarm’s hour, turn “TUNE/SELECT” button to change the hour.

The LCD display shows the time "1:00 AM" in a digital, segmented font.

2) Press down “TUNE/SELECT” button to Set Alarm’s minute, turn “TUNE/SELECT” button to change minute.

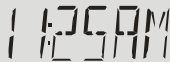The LCD display shows the time "1:25 AM" in a digital, segmented font.

3) Press down the "TUNE/SELECT" key to confirm the selection. For Radio Alarm, it plays the DAB or FM station that you tuned to before you turned off the radio at the same volume level, if you don't receive any DAB station on DAB mode, the alarm function cannot be activated on DAB mode.



4) Press down "Tune/Select" button to confirm the Alarm setting. The display will return to the Radio Frequency screen. Press the "STANDBY" button when you want to activate the Alarm.



When in standby mode, press the "ALARM" button to set the alarm

5.3 When Alarm is Triggered:

- 1) When the Alarm is set to "BUZZ", the "BUZZ" sound will be activated for 60 minutes when the Alarm is sounding, you can press the "STANDBY" key to cancel the alarm.
- 2) When the Alarm is set to DAB or FM, the DAB radio will switch from standby mode to Radio mode when the alarm starts. The alarm will last for 60 minutes. Press the "STANDBY" key to cancel the alarm or return to standby status.

6. Snooze Function



- 1) To enable the Snooze feature, press the "Snooze" button after the alarm starts. The alarm will turn on every 5 minutes if the snooze function is activated.
- 2) Press "STANDBY" key to Cancel Snooze Function.

7. Standby

If you press “STANDBY”, the LCD display will show “GOODBYE” and the clock will appear. In standby mode, the device is dormant; pressing “STANDBY” again reactivates the radio. You can also set the alarm in Standby mode by pressing the “ALARM” key.

8. System Reset

Refer to 3.5.

9. Signal Not Available

When there is no signal received after the Autoscan has been done, the display will show “OFF AIR”. It may be due to a weak signal. Please check if the Aerial has been pulled out and try again.



DAB AND FM RADIO

WARRANTY CARD

Congratulations! You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defeats due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that: -

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were not carried out by any other than the authorised workshop

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This does not affect your statutory rights.

The purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

Should your item become defective during the warranty period, in the first instance, please call our customer service centre, they will then inform you of what to do next. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair: -

- 1.Receipt (proof of purchase)
- 2.This warranty certificate and fault report card complete with your contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs to the address stated below. Quotes as well as repairs after the warranty period are to be paid in all cases.

Ensure that the product is well packed as no responsibility can be accepted for items lost or damaged in transit. This warranty does not affect your statutory rights.





DAB AND FM RADIO

FAULT REPORT CARD

Name _____

Address _____

Email _____

Contact Tel No. _____

Model Number 44149

Fault Description _____

SERVICE HELPLINE

UK/N.Ireland 01270 508538

Rep.Ireland 1800 995 036

web: www.quesh.co.uk

Quesh Ltd
1 Solway Court
Crewe Business Park
Crewe, CW1 6LD