 


FUNCTIONS AND CONNECTIONS


Front Display

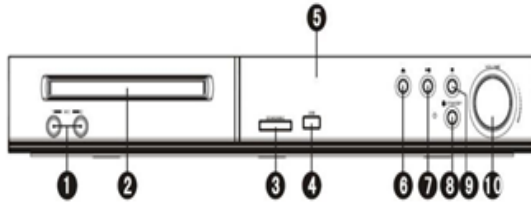


- | | |
|-----------------------|-----------------|
| 1. Microphone Sockets | 6. Open/Close |
| 2. Disc Tray | 7. Play/Pause |
| 3. Memory Card Slot | 8. Standby |
| 4. USB Slot | 9. Stop |
| 5. Display Screen | 10. Volume Dial |

Rear Display

- | | |
|-------------------|---------------------------------|
| 1. Power Switch | 6. Coaxial Digital Audio Output |
| 2. Speaker Output | 7. Composite Video Output |
| 3. HDMI Output | 8. Component Video Output |
| 4. Line Input | 9. FM Antenna Jack |
| 5. Audio Output | 10. AM Antenna jack |
| | 11. Scart Output |

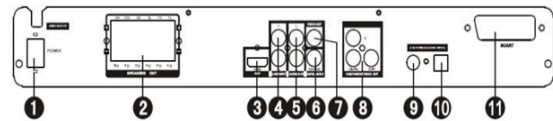

CONNECTING TO YOUR TV

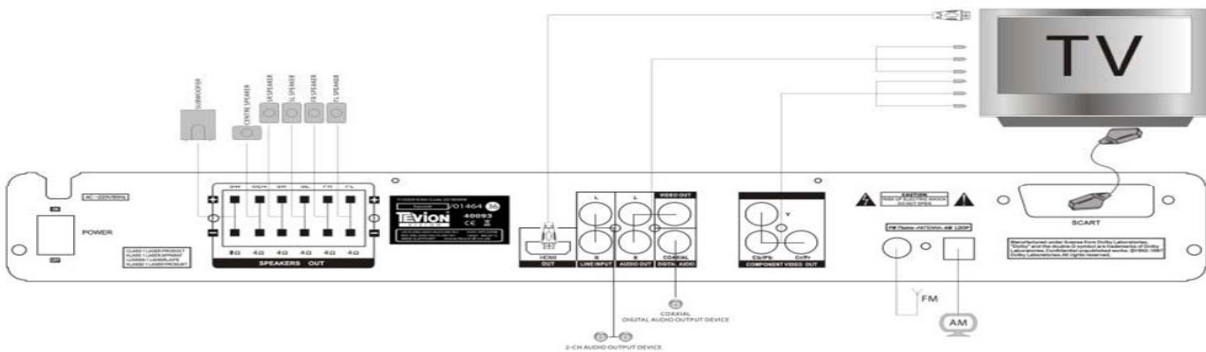

VIDEO SYSTEM CONNECTION

The following video outputs are available for this player.

Composite Video

Use the yellow plug of an AV cable to connect the composite video output of this player to the video input of a TV/monitor.

Component video

Use a 3-core AV cable to connect the component outputs of this player to the corresponding inputs of a TV/monitor.

HDMI

Use a HDMI cable to connect the HDMI output of this player to the HDMI input of a TV/monitor

Scart

Use a 21 pin SCART cable to connect the SCART output of this unit to the scart on your TV



DVD Home Entertainment System

Quick Set-Up Guide

PLAYING A DVD

1. Press the OPEN/CLOSE button either on the remote control or on the front of the unit to open the disc tray.
2. Insert the DVD ensuring the disc is the correct way up (mirror side down).
3. Press the OPEN/CLOSE button to close the tray. The DVD will load automatically.
4. Use the arrow keys on the remote control to navigate through the menu and press the ENTER button to confirm your selection.

PLAYING MUSIC CD's / MP3 DISC'S

1. Press the OPEN/CLOSE button either on the remote control or on the front of the unit to open the disc tray.
2. Place the CD onto the tray making sure that the disc is the correct way up (mirror side down).
3. Press the OPEN/CLOSE button to close the tray. The CD should now automatically load.
4. Use the arrow keys on the remote to navigate through the menu/files and press the ENTER button to confirm your selection.

USING A USB DEVICE OR MEMORY CARD

1. In order to play a USB flash disk or memory card, first, place the device into the relevant slot on the front of the unit.
2. When the screen displays no disc press the USB button on the remote control.
3. Use the arrow keys on the remote to navigate through the menu/files available and press the enter button to select the file.

USING THE RADIO

1. Press the source select button to change to radio mode. FM will be displayed on the display of the DVD unit.
2. If you wish to search manually for a station simply press the search +/- buttons. When you have found your station you can store this by pressing the memory button followed by the number you wish to store it to. For example 97.50Mhz press memory, press 02 on the numeric pad. This will now be saved to channel preset 2.
3. If you wish to do an automatic scan simply press the AUTO button which will then scan for all possible radio stations and store them for you.
4. To skip through the saved channels press the radio +/- buttons or use the numeric buttons.

For full instructions on how to use your DVD Home Entertainment System please refer to the user guide.