 



DISPLAY AND CONNECTIONS

Front Display

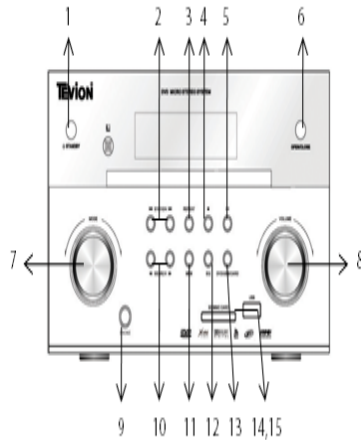


1. Standby
2. Station
3. Repeat
4. Mem
5. Play/Pause
6. Open/Close
7. Mode
8. Volume
9. Phone
10. Search
11. FM/AM
12. EQ
13. DVD / USB / Card
14. SD / MMC Card
15. USB Input

 Rear Display

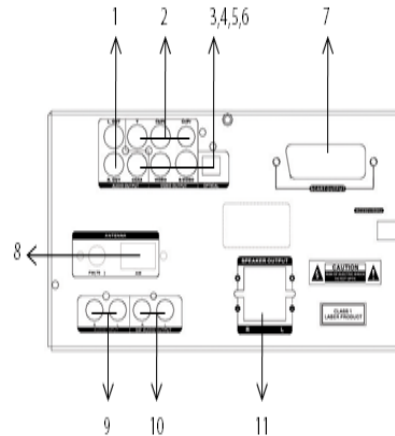

1. L.Out R.Out
2. Y Cb/Pb Cr/Pr
3. Coax
4. Video
5. S-Video
6. Optical
7. Scart
8. FM/AM
9. Audio Input
10. Audio Output
11. Speaker Output

 CONNECTING TO YOUR TV

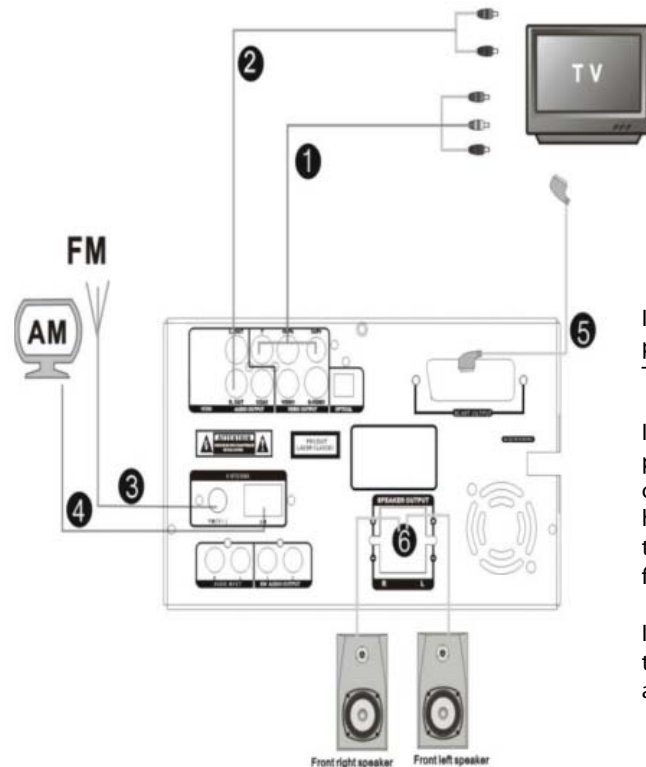

1. Connect with Y,Cb,Cr video input socket
2. Connect with audio signal input socket (audio component)
3. Connect with FM antenna
4. Connect with AM antenna
5. Connect with SCART
6. Connect with left/right front speaker socket

If your TV only has a VIDEO input socket (yellow socket), please connect the system's VIDEO output socket and the TV's VIDEO input socket with a video cable.

If your TV has a Y,Cb,Cr input socket, please use a Y,Cb,Cr port cable (not supplied) to connect this system's Y,Cb,Cr output socket with the TV's Y,Cb,Cr input socket to get a higher quality picture. When setting the system, please set the VIDEO output format to Y,Cb,Cr output.

In order to route the sound back through your TV rather than the speakers simply attach an audio cable from the audio out of the HIFI to the audio IN on your TV.



DVD Multi-Media Micro System

Quick Set-Up Guide

PLAYING A DVD

1. In order to play a DVD first make sure that you are in the DVD mode by pressing the INPUT button on the remote control.
2. Press the OPEN/CLOSE button either on the remote control or on the front of the unit to open the disc tray.
3. Place the DVD onto the tray making sure that the shiny side is facing down.
4. Press the OPEN/CLOSE button again to close the tray. The DVD will now automatically load to the main menu of the DVD.
5. Use the directional arrow buttons on the remote to navigate through the menu options and press the enter button to confirm.

PLAYING A CD / MP3 / PHOTO / VIDEO

1. In order to play an audio CD first make sure that you are in DVD mode by pressing the INPUT button on the remote control.
2. Press the OPEN/CLOSE button either on the remote or on the front of the unit to open the disc tray.
3. Place the CD onto the tray making sure that the shiny side is facing down.
4. Press the OPEN/CLOSE button again to close the tray. The CD will now automatically load to the main menu of the CD.
5. Use the directional arrow buttons on the remote to navigate through the menu options and press the enter button to confirm.
6. Move down to the tabs at the bottom of the menu to select whether you want to search for music, pictures or movies and press enter to confirm.

USING A USB/FLASH CARD

1. In order to play a USB flash disk or memory card, you must place it into the correct slot on the front of the HiFi.
2. Now press the DVD/USB/CARD until the desired mode appears.
3. The same menu as the CD (as above) will then be displayed allowing you again to navigate through the folders and files of the player
4. Move down to the tabs at the bottom of the menu to select whether you want to search for music, pictures or movies and press enter to confirm.

For full instructions, please refer to the User Manual