



DVD MULTI-MEDIA MICRO SYSTEM

User Guide



Now you have purchased a Tevion® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated helplines and web support

AFTER SALES SUPPORT

UK / N.IRELAND HELPLINE NO 01270 508538

REP. IRELAND HELPLINE NO 1800 995 036

WEB SUPPORT www.quesh.co.uk

MODEL NUMBER: 44163

Chapter

- 02. Welcome Section
- 03. General Information and Safety Instructions
- 04. Battery Handling and Usage
- 05. Accessories
- 06. Features
- 07. Getting Started
- 08. Remote Control Operation
- 09. Connecting To Your TV / Playing a DVD
- 10. Playing A CD MP3/IMAGE/VIDEO
- 11. Using a USB Flash Card / The Radio
- 12. System Settings
- 13. Technical Specifications
- 14. Troubleshooting
- 15. Warranty Card
- 16. Fault Report Card

 
Congratulations on choosing to buy a Tevion® product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of Europe's leading manufacturers.

All products brought to you by Tevion® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 year warranty.

We hope you enjoy using your purchase for many years to come.

General Information and Safety Instructions 3

Please read through the following safety information before use

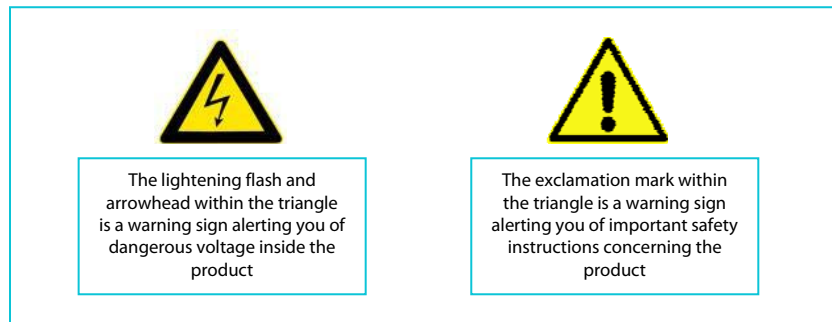

CAUTION
RISK OF ELECTRIC SHOCK AND
LASER RADIATION - DO NOT OPEN

- To avoid risk of electric shock or laser radiation do not attempt to open this appliance.
- Never look directly at the laser inside this product.
- Keep away from fire.
- Do not expose this product to water, rain or dampness.
- Keep this appliance away from direct sunlight and other heat sources.
- Keep this appliance away from strong magnets.
- Never cover the ventilation slots on the underside or back of the appliance.
- Avoid placing heavy objects on top of the appliance.
- Always disconnect the appliance from mains power before cleaning.
- Clean the exterior of the appliance with a soft cloth only.

Battery Handling and Usage

4

Remote Control

The remote control uses 2 x AAA batteries (included).

When inserting batteries always ensure the correct +/- polarity.

Battery Safety

- Never throw batteries into fire or expose to excessive heat sources.
- If batteries are swallowed, please seek immediate medical attention.
- Ensure correct polarity when installing batteries
- Do not recharge non-rechargeable batteries

Disposal of Your Old Product

Electric and electronic equipment (EEE) contains materials, parts and substances which can be dangerous to the environment and harmful to human health. Once this appliance has reached the end of its life span, the unit in its entirety should be taken to a recycling centre. Please contact your local authority for details of recycling schemes in your area.



Do not dispose of batteries in your household waste. Please contact your local authority for details on safe disposal.



Do not dispose of this product in your household waste. Please contact your local authority for details of recycling schemes in your area.

Accessories

5

The following accessories are included with your DVD multi-media micro system. Should any of these be missing, please contact the customer support team on the number below.

1. Remote control



2. AV cable



3. AM antenna



4. Speaker cables



5. User's manual



6. FM antenna




7. Aux Cable




6

- 2.0 Channel stereophonic DVD multi-media micro system.
- Playback formats: DVD / DVD+/-R / DIVX / VCD / SVCD / MP3 / WMA CD / CD-R / CD-RW / MPEG4/ JPEG picture CD.
- High sensitivity PLL digital AM / FM tuner (20 presets).
- USB input and SD/MMC card reader.
- Auxiliary input
- Dolby digital output.
- 3 Way speaker pair 75W output
- Standby clock / timer setting.
- Scart, component, s-video, composite output.

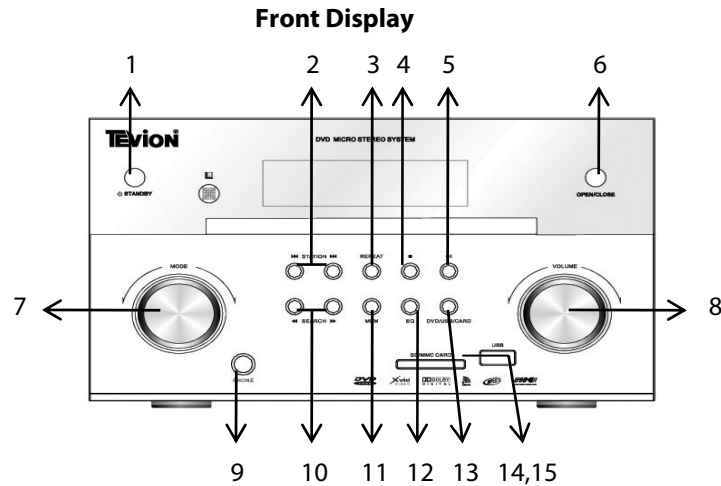


- | | |
|------------------|---------------------------------------|
| 1. Standby | Standby |
| 2. Station | DVD / RADIO: Prev/Next track /station |
| 3. Repeat | Repeat |
| 4. Mem | Stop/Memory |
| 5. Play/Pause | Play/Pause |
| 6. Open/Close | Open/Close |
| 7. Mode | AUX / FM / USB /SD |
| 8. Volume | Main volume |
| 9. Phone | Earphone outlet socket |
| 10. Search | DVD /RADIO: Quick for/rev search |
| 11. FM/AM | FM/AM |
| 12. EQ | EQ mode selection |
| 13. DVD/USB/Card | DVD/USB/CARD |
| 14. Flash Memory | SD/MMC card slot |
| 15. USB Input | USB Input |

 Rear Display

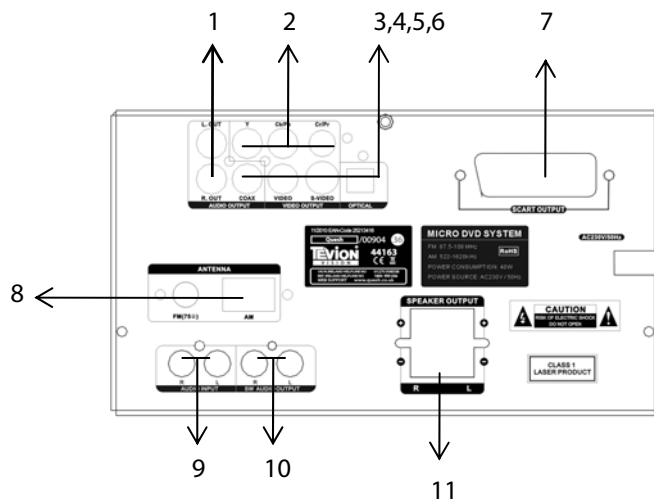

- | | |
|--------------------|-------------------------------------|
| 1. L.Out R.Out | Left/right mix audio output socket |
| 2. Y Cb/Pb Cr/Pr | Y Cb Cr video output socket |
| 3. Coax | Digital audio coaxial output |
| 4. Video | DVD video output |
| 5. S-Video | S-video output socket |
| 6. Optical | Digital audio optical output socket |
| 7. Scart | Scart output |
| 8. FM/AM | FM/AM antenna |
| 9. Audio Input | Audio input socket |
| 10. Audio Output | Audio output socket |
| 11. Speaker Output | Left and right sound output socket |

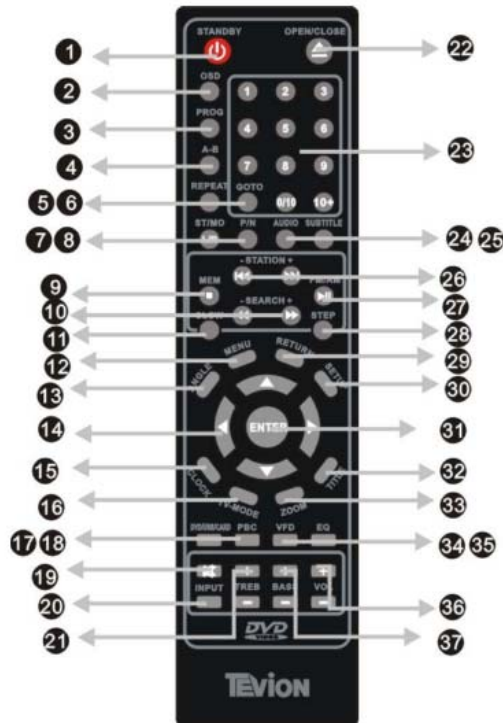

1. Standby
Press the key when you are not using the stereo, in order to save energy.
2. OSD
Press OSD key, the screen will show current time, remaining time and other functions.

3. PROG

Press PROG key, the screen will show the program menu. The machine can program a sequence of 16 tracks (VCD/CD/MP3) or chapters (DVD). After entering the PROG menu, the cursor will stay at NO.1. Input the track (VCD/CD/MP3) or chapter (DVD) number that you want to play first by pressing the numeric key (0-9). Then press the direction key to move the cursor to position NO.2, the operation is the same as above. If you make a mistake or if you want to change the order of the program, you can move the cursor to the place that you want to start the program playing. Press STOP to exit the PROG picture, then press the PLAY key to play normally. When Playing JPEG files, press PROG key to select the picture display mode.

Note : in the program playing state, DVD discs do not have the repeat function. Some discs also do not have the program-playing function.

4. A-B REPEAT

A-B repeat function lets you set your favourite scenes for instant repeat.

1. Press the key at the point where you want the repeat to start.
2. Press the key again at the point you want to repeat, then the function will play only the point between A and B.
3. Press the button again to cancel the repeat section.

5. REPEAT

If the REPEAT key is pressed when the machine is playing, the track will repeat, if you want the whole program to repeat, press the REPEAT key again.

6. GOTO

The GOTO button allows you to move to the place of your choice. After pressing the GOTO button enter the track, and title of the chapter required using the number keypad. Or enter the exact hours, minutes and seconds corresponding to the place where you wish to start playback.

-
7. **ST/MO/L/R**
When playing the radio you can press this button to change the stereo output. When playing a disc press this button to choose stereo/mono L/mono R/mix mono output.
 8. **P/N-MODE SELECT**
Press this key to select the PAL, NTSC, AUTO.
 9. **MEMORY-STORAGE STATION/STOP**
After searching for a station, press this button to memorise the channel. You can choose the pre-selection number using the numeric keypad. In normal playing state, press this button to go to stop mode, the TV screen will show the start logo. With some discs, the player can recall the location where it was stopped.
 10. Press this key to fast forward or rewind, keep pressing to speed up or to return to normal play speed.
 11. **SLOW**
Press this key when playing a DVD/VCD disc, it will play at 1/2,1/3,1/4,1/5,1/6,1/7, of the normal speed. Press the PAUSE key to return to normal playback.
 12. **MENU**
Press this key (only available during DVD playback) and the main menu will appear. Press the direction keys to choose a program and then confirm.
 13. **ANGLE**
Some DVD discs can be played at different angles but only if they have multi angle encoded into them, simply press this button to switch angles.

14. DIRECTION KEYS (UP/DOWN/LEFT/RIGHT)

Used to move to required selections.

15. CLOCK

a) SLEEP

1) While the product is on, press the CLOCK key once, the screen shows 'sleep'.

2) Now press the left/right direction keys to set a sleep time. The maximum is 120 minutes. When finished a "SLEEP" icon will show on top of the screen.

b) CLOCK

1) The second press of the CLOCK will allow you to set up the time, press left/right direction keys to set the time.

c) TIMER ON

1) In standby mode, playback mode or radio mode press the CLOCK key three times. The screen will display "TMR ON" press the CLOCK key again, the screen will display "00:00", continue to use the left/right direction keys to setup the "TMR ON" time.


2) Finally, press the CLOCK key to exit the setting.


d) TIMER OFF

Set the timer to off with the CLOCK key and use the left/right direction keys the same as TIMER ON settings.

16. TV-MODE

During DVD playback, press this key to choose the following options: YUV, SCART, S-VIDEO.

- 
17. DVD/USB/CARD
When in the DVD mode, you can switch to DVD/USB/CARD mode by pressing this key.
 18. PBC
Press this key to display the PBC menu on the screen. You can then choose the play mode. Press it again to cancel the function.
Note : You can only choose the program using the number keys or with the skip forward/backward keys.
 19. MUTE
When playing a disc, press the mute key to cancel audio output, press it again to cancel the function and resume sound.
 20. INPUT
Press this key when the HIFI is turned on, to change the input from :
RADIO/DVD/AUX.
 21. TREB+/TREB-
Press these keys to strengthen or weaken the treble effect (0-14).
 22. OPEN/CLOSE
Press this key to open or close the CD tray.
 23. NUMERIC KEYPAD (0-9)
Press the numbers 0-9 to directly select a program up to 10, if the number of the program exceeds 10, you can press 10+ key followed by the desired number, for example 10+ then 7 would be 17.
 24. AUDIO
Press the key repeatedly to choose different languages that are recorded on the disc.

- 
25. SUBTITLE
The HIFI supports many languages, press the key repeatedly to select the languages available on the disc.
 26. PREVIOUS/NEXT STATION/PREVIOUS/NEXT TRACK
Press to skip to next track or go back a track.
 27. FM/AM CHANNEL AND PLAY/PAUSE
When the radio is on, press the key to change from FM to AM. In playback mode, press this key to change pause or resume play.
 28. STEP
Press this key to view a sequence frame by frame.
 29. RETURN
Press this key when playing a disc to return to the title menu.
 30. SETUP
This key is used to setup the system language, TV mode, screen display, video output and audio output of the disc.
Press the SETUP key, and use the direction keys to navigate within the menu and the screen will display the different menus which enable you to program the HIFI. After you have made the adjustments, press the setup key to exit this menu.
 31. ENTER
Press this key to confirm selections in the menu displayed on the screen.
 32. TITLE
Press this key to return to the title of the DVD disc.

33. ZOOM

Press this key when playing a DVD/VCD, the original picture will zoom by 2x,3x,4x,1/2x,1/3x,1/4x.

34. VFD

Press this key to adjust the balance (up or down).

35. EQ

When the HIFI is switched on, press the EQ key to change the balance mode. Options available are : JAZZ, CLASSIC, ROCK, POPS and DSP OFF.


36. MAIN VOLUME (UP/DOWN)

37. BASS

Press this key to adjust the volume for the BASS +/BASS – press the keys to strengthen or weaken the bass effect.

NOTE

1. Please make sure the batteries are in the remote control before use.
2. The distance of the remote control should not exceed 7 metres from the unit.

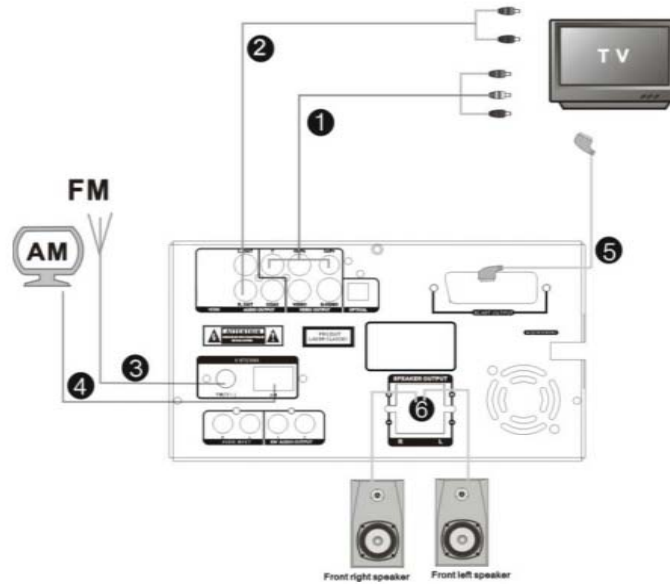

1. Connect with Y,Cb,Cr video input socket
2. Connect with audio signal input socket (audio component)
3. Connect with FM antenna
4. Connect with AM antenna
5. Connect with SCART
6. Connect with left/right front speaker socket

If your TV only has a VIDEO input socket (yellow) socket, please connect the System's VIDEO output socket and the TV's VIDEO input socket with a video cable.

If your TV has a Y,Cb,Cr input socket, please use a Y,Cb,Cr port cable (not supplied) to connect this system's Y,Cb,Cr output socket with the TV's Y,Cb,Cr input socket to get a higher quality picture. When setting the system, please set the VIDEO output format to Y,Cb,Cr output.

In order to route the sound back through your TV rather than the speakers simply attach an audio cable from the audio out of the HIFI to the audio in on your TV.


Playing a DVD

1. In order to play a DVD first make sure that you are in DVD mode by pressing the INPUT button on the remote.
2. Press the OPEN/CLOSE button either on the remote or on the front of the unit to open the disc tray.
3. Place the DVD onto the tray making sure that the shiny side is facing down.
4. Press the OPEN/CLOSE button again to close the tray. The DVD will now automatically load to the main menu of the DVD.
5. Use the directional arrow buttons on the remote to navigate through the menu options and press the enter button to confirm.

Playing a CD MP3/IMAGE/VIDEO

10

1. In order to play an audio CD first make sure that you are in DVD mode by pressing the INPUT button on the remote.
2. Press the OPEN/CLOSE button either on the remote or on the front of the unit to open the disc tray.
3. Place the CD onto the tray making sure that the shiny side is facing down.
4. Press the OPEN/CLOSE button again to close the tray. The CD will now automatically load to the main menu of the CD as shown below.
5. Use the directional arrow buttons on the remote to navigate through the menu options and press the enter button to confirm.
6. Move down to the tabs at the bottom of the menu to select whether you want to search for music, pictures or movies and press enter to confirm.

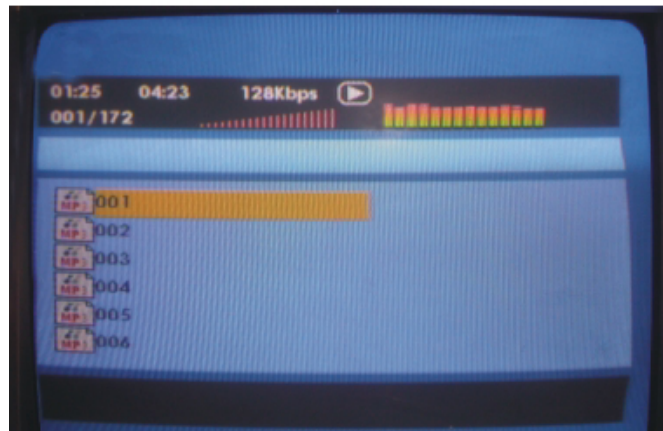

Using a USB/Flash Card

11

1. In order to play a USB or Flash card, you must place it into the correct slot located on the front of the micro system.
2. Now press the DVD/USB/CARD until the selected mode.
3. The same menu as the CD (as shown on the previous page) will then display allowing you again to navigate through the folders and files of the player.
4. Move down to the tabs at the bottom of the menu to select whether you want to search for music, pictures or movies and press enter to confirm.

Note: The music on the USB/flash card should be in MP3 or WMA format

Using The Radio

1. Press the input button on the remote control or swivel knob on the front of the micro system until either FM/AM is displayed on the VFD.
2. To do a manual scan simply press the search button left or right continually until you have found a strong signal, once found you can store this station into the micro system's memory by pressing the MEM button on the remote once then while the number is flashing select a channel number to store this to then press MEM again to store.
3. In order to do an autoscan press and hold the search left or right.
4. Once you have found and stored your channels you can either press the corresponding number to choose your stored channel or press the station left and right.
5. If you wish to search on AM then press the FM/AM button to switch.

System Settings

12

In order to access the Setup options you will need to be connected to a TV to view the menu.

Press Setup key to open the main Setup menu as shown below.

General	Audio	Dolby	Video	Preference
— Preference Setup Page —				
TV Type	PAL		PAL	
Audio	FRE		AUTO	
Subtitle	FRE		NTSC	
Disc Menu	FRE			
Parental				
Password				
Default				

TV System

Different disc formats suit different TV standards. According to the different disc formats, select the TV signal mode of the system output by using TV mode.

Options : NTSC, PAL, AUTO.

Note : if your TV is in NTSC or PAL mode, and you choose the wrong TV mode by mistake, the picture will appear on the screen in black and white or it will blink. Press "P/N" key to reset.

General	Audio	Dolby	Video	Preference
— Preference Setup Page —				
TV Type	PAL		PAL	
Audio	FRE		AUTO	
Subtitle	FRE		NTSC	
Disc Menu	FRE			
Parental				
Password				
Default				

Screen Saver

Use the screen saver option to open or close the screen saver program.

Options : ON/OFF

On : After a certain time (about 3 min), the screen saver program will open automatically. Press any keys to cancel the screen protection mode.

Off : when the close function is selected, the system's screen saver will not activate.

Video Output









Video output offers different image quality.

Options available are : INTERLACE-YUV,TV-RGB,P-SCAN YPBPR,S-VIDEO.

TV Type

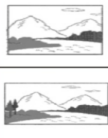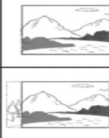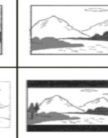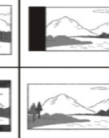Depending on the type of television you have, you may want to adjust the screen setting.

4:3PS,4:3LB,16:9

TV screen Film Format	4 : 3			16 : 9
	Normal mode	Whole screen	Mailbox mode	Wide screen
4 : 3				
16 : 9				

4:3 PS

The use of a non widescreen TV. When playing wide screen pictures, the extreme left and right sides of pictures will be cut off.

4:3 LB

The use of a non widescreen TV. When playing the width screen pictures, the screen will appear with black bars at the top and bottom of the screen.

16:9

Connect to a widescreen TV.

Note :

1. No matter what kind of TV is used, if you choose a 4:3 display the picture will appear with 4:3 rate.
2. If the screen uses a 4:3 to display, and the DVD is in 16:9 display format, the pictures will be very narrow.

Password

Through code and rating settings, children can be prevented from watching unsuitable DVD discs by doing the following.

1. Unlock the system by entering 9999 the lock will then display as open.
2. Use the direction keys to select the desired level from the following options KID SAFE, G, PG, PG13, PG-R, R, NC-17, ADULT.

Once you have selected the desired setting, you cannot play DVD discs which exceed the level you set unless you input the correct code. Make sure you lock the system again by moving back to the padlock and entering 9999 again.

Changing the existing password

1. Input the existing 4 digit password 9999 when prompted.
2. Input another 4 digit password of your choice and press enter.
3. The new code will now be activated.

Default setting

This setting cancels all system settings and menu settings, and returns them to the original settings.

Note : This function does not work for and password items.

Power resume

If the setting is on, and you leave the DVD in on with action being taken it will automatically go into hibernation, to wake simply press play.

Language setting

This setting allows you to adjust the language of the DVD disc, the caption language, the OSD language and the menu language as long as the DVD support's the language selection.

OSD Language

Press OSD language key to select the desired language for on screen display.

Options : ENGLISH, GERMAN, SPANISH, FRENCH, PORTUGUESE.

Audio Language

DVD discs can be recorded in several languages. Select the desired language for DVD playback with the AUDIO key on the remote control.

Options : ENGLISH, FRENCH, SPANISH, CHINESE, JAPANESE, KOREAN, RUSSIAN, THAI.

Subtitle language

DVD discs can contain several caption languages. When playing DVD discs, the captions are shown in the language chosen in the setting menu. During playback, select the desired language with the SUBTITLE key on the remote control.

Options : ENGLISH, FRENCH, SPANISH, CHINESE, JAPANESE, KOREAN, RUSSIAN, THAI.

Menu Language

DVD discs can contain up to eight menu languages.

Options : ENGLISH, FRENCH, SPANISH, CHINESE, JAPANESE, KOREAN, RUSSIAN, THAI.

When playing DVD discs, the machine will automatically play the preset menu language. If you need to choose another language press the SETUP key to enter this menu, then press up/down key to choose the desired menu language, and press the ENTER key to confirm (this setup depends on your disc).

Audio Setup

Used to set the audio output mode and the tone.

Audio Output

Used to set the machine's audio output.

Options : SPDIF/OFF, SPDIF/RAW, SPDIF/PCM.

SPDIF/OFF : analogue output audio signal

SPDIF/RAW : digital decoder/amplifier audio signal output.

SPDIF/PCM : digital audio signal output for use with digital stereo amplifier

Video Setup

Used to set the brightness, contrast, hue and saturation of the system's video signal.

Brightness Setting

Once selected use the arrows to adjust the brightness up or down.

Contrast Setting

Once selected use the arrows to adjust the contrast up or down.

Hue Setting

Once selected use the arrows to adjust the hue up or down.

Saturation Setting

Once selected use the arrows to adjust the saturation up or down.

Speaker Setup

Downmix : Stereo two channels output, stereo audio output.

Digital setup

Output mode

Used to set output video signal compressing mode of the machine.

Options : Line out, RF re-mode.

Line Output

Compresses the output audio signal, this can be used at night when watching a film with significant variations in sound levels.

DVD video

Power supply	AC 230V 50Hz	Signal mode	PAL
Power	40W	Frequency	20Hz-20KHz±2.5db
N.W	6.64KG	S/N	>90db(1KHz)
G.W	7.85KG	Audio scope	>106db(1KHz)
Size	400×380×280mm	Conditions for use	Temperature:5℃-35℃ Position:Horizontal

Output

Video output	1.0V(P-P) 75 Ω	Digital audio output (BISTREAM/PCM COAXIAL)	0.5V (P-P) 75 Ω
S-VIDEO	(Y)1.0V (P-P) 75 Ω (C)0.286V (P-P) 75 Ω	Audio output	2.0V (P-P)

Troubleshooting

14

PROBLEM	POSSIBLE CAUSE	REMEDY
No power display	Power plug is not inserted properly The power is not switched on.	Make sure the power plug is inserted fully and both your wall socket and Hifi are switched on
No picture	Video line not properly connected TV not properly set up Hifi is not in the correct mode	Check the video output connection Set the TV into the correct mode Select the correct Hifi mode
DVD will not play	The disc is badly scratched The disc is the wrong region The disc is in upside down	Try cleaning the disc Check the region is compatible Check the disc is in the correct way
No sound	Audio line not connected Speakers not connected Mute may be activated	Check Audio connections Check the speaker connections Check the volume setting and mute



DVD MULTIMEDIA MICRO SYSTEM

WARRANTY CARD

Congratulations! You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience issues due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that: -

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were carried out only by the customer service centre

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This does not affect your statutory rights.

The purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

Should your item become defective during the warranty period, in the first instance, please call our customer service centre, they will then inform you of what to do next. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair: -

- 1.Receipt (proof of purchase)
- 2.This warranty certificate and fault report card complete with your contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs to the address stated below. Quotes as well as repairs after the warranty period are to be paid in all cases.

Ensure that the product is well packed as no responsibility can be accepted for items lost or damaged in transit. This warranty does not affect your statutory rights.





DVD MULTIMEDIA MICRO
SYSTEM

FAULT REPORT CARD

Name _____

Address _____

Email _____

Contact Tel No. _____

Model Number 44163

Fault Description _____

SERVICE HELPLINE

Qesh Ltd

1 Solway Court, Crewe Business Park, Crewe, CW1 6LD

UK/N.Ireland 01270 508538

Rep.Ireland 1800 995 036

web: www.qesh.co.uk