



Portable CD/MP3 Stereo

User Guide



Now you have purchased a Tevion® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated helplines and web support

AFTER SALES SUPPORT

UK/N.IRELAND HELPLINE NO 01270 508538

REP. IRELAND HELPLINE NO 1800 995 036

WEB SUPPORT WWW.QUESH.CO.UK

MODEL NUMBER: 44170

Contents

1



1. Contents
2. Welcome Section
3. Information and Safety Instructions
4. Getting Started
5. Radio Operation
6. CD/USB Operation
7. Playback Mode Selection
8. MP3/AUX/Headphone Connection
9. Specifications
10. Warranty Card
11. Fault Report Card


Congratulations on choosing to buy a Tevion® product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of Europe's leading manufacturers.

All products brought to you by Tevion® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 year warranty.

We hope you enjoy using your purchase for many years to come.

Information and Safety Instructions 3

 <p>The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of un-insulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION</p> <div style="background-color: black; color: white; padding: 5px; text-align: center;"> <p>RISK OF ELECTRIC SHOCK</p> <p>DO NOT OPEN</p> </div> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</p>
---	--	--

<p>LASER SAFETY</p> <p>This unit uses a laser. Only a qualified service person should remove the cover or attempt to service this device to avoid possible eye injury.</p> <p>Caution: USE OF CONTROLS OR ADJUSTMENT OF PERFORMANCE OF PROCEDURE OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.</p>	<p>DANGER:</p>  <p>INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.</p>
---	--

Please read through the following safety guidelines before use.

The ventilation slots should be kept clear at all times to avoid potential overheating and to ensure reliable operation.

Do not use this product near water as there is a risk of electric shock.

To clean the unit, please first unplug it from the power source and use a damp cloth.

DO NOT attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Please seek the help of a qualified professional for servicing needs.



Battery Information

This product can be powered by 6 x C batteries.
Do not dispose of batteries in your household waste.

Please contact your local authority for details on safe disposal.

Never throw batteries into a fire or expose to excessive heat sources.

If batteries are swallowed, please seek immediate medical attention.

Always ensure correct +/- polarity when installing batteries.

Do not recharge non rechargeable batteries.




Do not dispose of this product in your household waste. Electrical and electronic equipment (EEE) contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) is not disposed of correctly.

Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

Getting Started

4

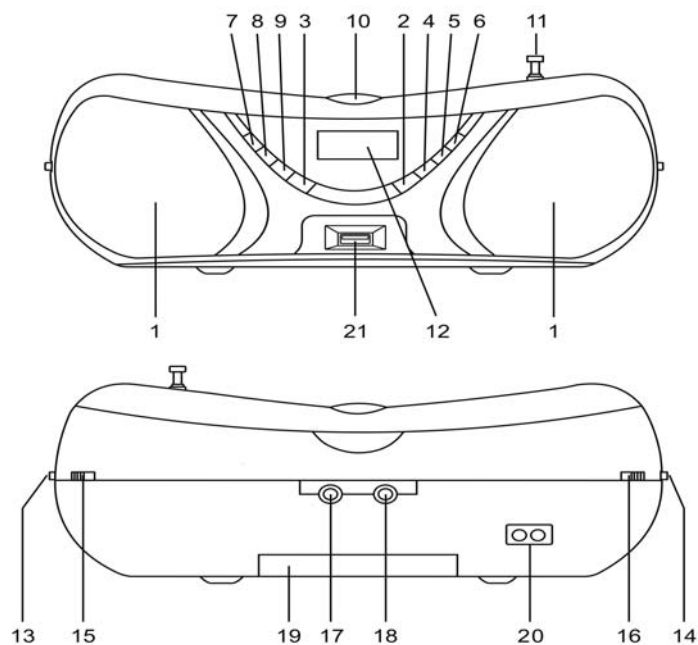

- | | |
|----------------------|-------------------------|
| 1. Speakers | 11. Aerial |
| 2. Play/Pause Button | 12. LCD Display |
| 3. Stop Button | 13. Tuning Control |
| 4. Skip Up Button | 14. Volume Control |
| 5. Skip Down Button | 15. Band Switch |
| 6. Mode Button | 16. Function Switch |
| 7. Program Button | 17. Headphone in Jack |
| 8. CD/USB Button | 18. Aux-In Jack |
| 9. Folder Up Button | 19. Battery Compartment |
| 10. CD Compartment | 20. AC in Socket |
| | 21. USB Slot |

AC Power Operation

Connect the AC power cable to your mains output socket and switch on the mains supply. Make sure that the voltage is compatible.

Disconnect the power cord from the mains when not in use.

Battery Operation

Open the battery compartment at the back of the unit and insert 6 x size C batteries. Please always ensure the correct polarity when inserting batteries.

1. Set the function switch to the RADIO position.
2. Set the band switch to the AM or FM position to select the band.
3. Tune to the desired radio station by turning the tuning control clockwise and anti-clockwise.
4. Adjust the volume to the desired level using the volume control.
5. To turn off the radio, set the function switch to the OFF position.

Antenna

1. For FM reception there is a built in FM aerial at the rear of the unit.
2. Extend the aerial and move it around to receive the best reception available.
3. For AM reception the signals are picked up through a built in ferrite antenna, you may need to relocate the unit to receive the best reception available.

Playing Audio CDs

1. Set the Function Switch to the CD/USB position.
2. Press the CD/USB Button to select CD mode, a CD icon will appear on the LCD display.
3. Insert a CD into the CD compartment and close the CD door, the unit will start reading the disc, it will show the total number of tracks on the disc.
4. Press the Play/Pause Button to start playing the disc.
5. During playback, press the Play/Pause Button to temporarily pause playing. To resume, press the Play/Pause Button again.

Playing MP3 files with USB

1. Set the Function Switch to the CD/USB position.
2. Press the CD/USB Button to select the USB mode, USB will appear on the LCD display.
3. Plug your USB device into the USB port on the unit, the unit will start to read the files in the USB device, it will show the total number of tracks on the device.
4. Press the Play/Pause Button to start playing the MP3 files.
5. Press the Folder Up Button to select the folder you want to listen too.
6. During playback, press the Play/Pause Button to pause playing. To resume, press the Play/Pause Button again. Press the skip up or skip down to change the current track.

Skip Mode

1. During play or pause mode, press the Skip Up Button to go to the next track.
2. During play or pause mode, press the Skip Down Button to go back to the beginning of the track. Press the Skip Down Button again to go back to the previous track.

Different Play Mode

1. Press the Mode Button to select different kinds of play mode with the following sequence.

For CD Disc : Repeat ➔ Repeat All ➔ Random ➔ Normal

For MP3 Disc : Repeat ➔ Repeat Album ➔ Repeat All ➔ Random ➔ Normal

Playing Tracks In a Specified Order

The programming can only be done in the Stop mode

1. Press the Program Button, the LCD display will display 01 and flash.
2. Use the Skip Next or Skip Previous Button to select the desired track.
3. Press the Program Button again to store the selected track into the memory, the LCD display will show 02 and flash.
4. Repeat steps 2 to 3 to store more tracks into the memory. You can store up to 20 tracks in the memory at any one time.
5. Press the Play/Pause Button to start playing the disc in the programmed order.
6. To stop playing, press the Stop Button.
7. To cancel the programming list, press the Stop Button and open the CD compartment door or select a different function AUX/OFF or RADIO.

MP3/AUX In

1. Insert one side of the audio cable (requires 3.5mm stereo plug, not supplied) into the line-out jack or phones jack on your MP3 player and the other side to the aux-in jack on the unit.
2. Turn on the unit and slide the function selector to AUX/OFF position.
3. Turn on your MP3 player and start playing your songs.
4. To stop this function, simply turn off your MP3 player.

Stereo Headphone Jack

For private listening, insert the plug of a stereo headphone into the Stereo Headphone Jack and adjust the Volume Control accordingly. During the use of headphone's, the speakers are automatically disconnected.

Specifications

9

Frequency Range:	AM 540 - 1600 KHz FM 88 - 108 MHz
Power Supply:	AC 230V ~ 50 Hz DC 9V (UM-2 x 6)



PORTABLE CD/MP3 STEREO

WARRANTY CARD

Congratulations! You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience issues due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that: -

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were carried out only by the customer service centre

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This does not affect your statutory rights.

The purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

Should your item become defective during the warranty period, in the first instance, please call our customer service centre, they will then inform you of what to do next. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair: -

- 1.Receipt (proof of purchase)
- 2.This warranty certificate and fault report card complete with your contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs to the address stated below. Quotes for repairs after the warranty period are to be paid in all cases.

Ensure that the product is well packed as no responsibility can be accepted for items lost or damaged in transit. This warranty does not affect your statutory rights.





PORTABLE CD/MP3 STEREO

FAULT REPORT CARD

Name _____

Address _____

Email _____

Contact Tel No. _____

Model Number 44170

Fault Description _____

SERVICE HELPLINE

UK/N.Ireland 01270 508538

Rep.Ireland 1800 995 036

web: www.qesh.co.uk

Qesh Ltd
1 Solway Court
Crewe Business Park
Crewe, CW1 6LD