 
 


FUNCTIONS AND DISPLAY

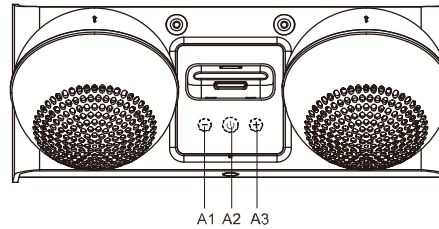


Top View

- A1. Volume Up
- A2. Power ON/OFF
- A3. Volume Down

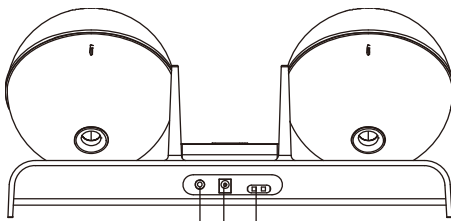

Rear View

- B1. Aux Input
- B2. Mains power socket
- B3. Frequency channel switch

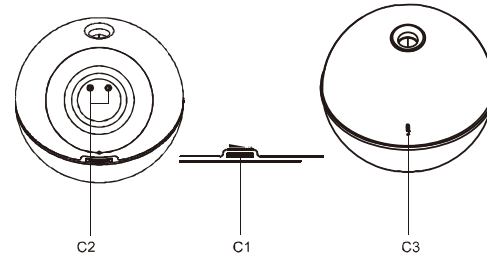

Speakers

- C1. Power ON/OFF & Volume UP/DOWN
- C2. Charging pin
- C3. LED charging Indicator

REMOTE CONTROL



Remote control

Power: Standby ON/OFF.
Menu: Returns to main menu.
Enter: Selects the command.

- ▲ Menu UP
- ▼ Menu DOWN
- ⏮ Previous track
- ⏭ Next track
- ▶|| Play / pause
- 🔊 Volume Increase
- 🔊 Volume decrease

SETTING UP YOUR WIRELESS SPEAKERS

Connect the mains power adaptor to your household mains power outlet socket and the other end into the mains power input (B2) at the rear of the base station. Switch on the mains power supply and then press the standby button (A2) located on the top of the base station. Now place the two speaker capsules on the base station ensuring they are firmly in place. A red LED light will appear on each speaker to indicate charging. We recommend charging the speakers for 4 hours before first use. The LED light will change to green when the speakers are fully charged. Once the speakers are fully charged you can remove them from the base station. To switch the speakers on, simply turn the volume wheel to the right until it clicks. A blue LED light will be displayed on the volume indicator. The wireless function will be activated automatically as soon as the speakers are removed from the base station. The wireless operating range is up to 30 metres in an open area without interference.

PLEASE REFER TO THE USER MANUAL FOR FULL INSTRUCTIONS.