 


### FUNCTIONS AND CONNECTIONS

 
#### Front Display

1. Standby Indicator
2. Remote Control Sensor
3. USB Input

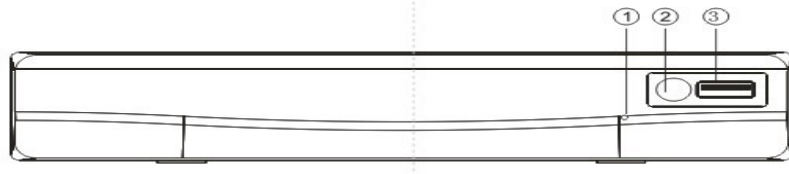


#### Rear Display

1. RF IN
2. RF Loop Through
3. VCR Scart
4. TV Scart
5. COAXIAL
6. Mains Cable

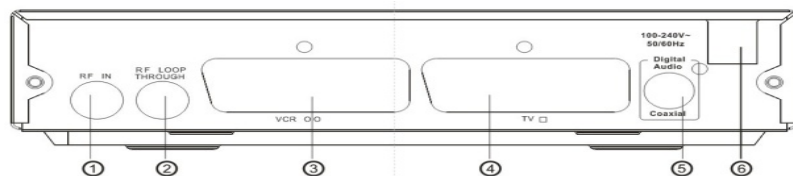

### CONNECTING TO YOUR TV

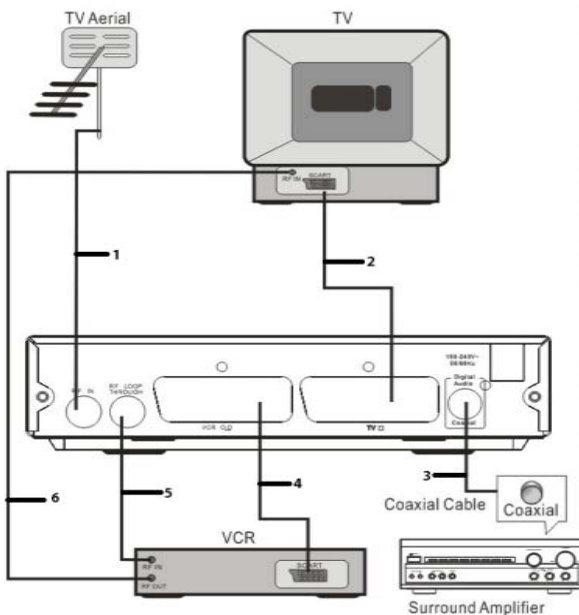 


1. To connect your set top box to your TV, simply follow these steps:
2. Connect the set top box to your existing aerial point.
3. Insert one end of the scart cable (provided) into the TV scart socket on the set top box, then simply connect the other end to an available scart socket on your TV.
4. (Optional) Insert one end of a COAXIAL cable into the COAXIAL socket on the back of the set top box, connect the other end to the COAXIAL socket on our surround sound system.
5. (Optional) Insert one end of a scart socket into the VCR socket, then connect the other end into your VCR/DVD player.
6. (Optional) Insert one end of your RF loop through cable into the RF LOOP THROUGH socket on the set top box, then connect the other end into your VCR's RF IN socket.
7. (Optional) Insert one end of your RF cable into the RF out socket on your VCR, then connect the other end into the RF in socket on the back of your TV.

**Note :** When connecting your digital set top box to other equipment, e.g, TV or VCR , make sure to refer to the relevant user manual for instructions. Also make sure you disconnect all the equipment from the mains power supply.


## OPERATING YOUR FREEVIEW BOX

 Once your Set Top Box is connected to your TV it is ready for operation. When the set top box is turned on for the first time or taken out of standby with no services, a welcome screen will be displayed. This will give you the option to press the "OK" key to start a full frequency scan as shown.

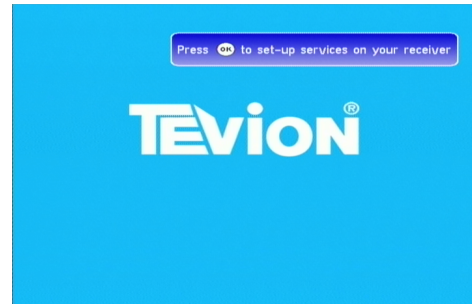

When the scan is complete and takes you to your first channel, press the "EPG" key to show the list of installed services and to choose which channel you wish to view. Also a video/audio preview is given in the top right hand corner which shows the channel currently being watched. You can scroll through this menu, select between now and next information and also use the "RED" key to add a timer for a programme.

 If a channel is not available and you cannot see a preview for the channel one of the following will be displayed in the preview area.

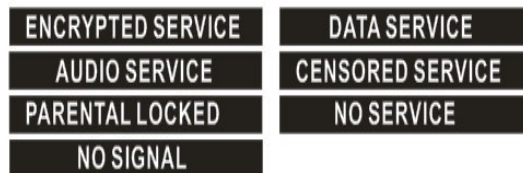


## USB OPERATION

To use a USB device simply connect it to your Set Top Box, then navigate to the multimedia option.

Here you have three options.

 1. My Album - For viewing photo's in the following formats JPG/BMP/GIF.
2. My Music - For playing music in the following formats MP3/WMA.
3. My Movie - Can play some Divx Movies.

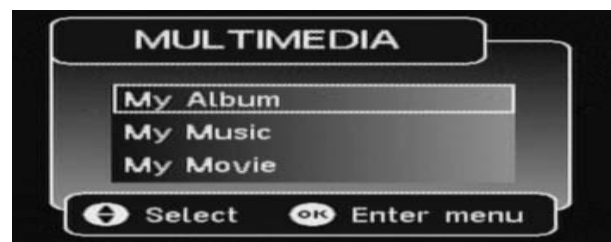

**For full instructions please refer to the user guide**