 


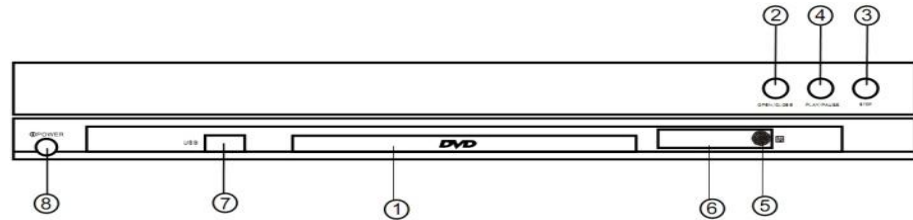

DVD FUNCTIONS AND CONNECTIONS


Front Display

1. DVD tray
2. Open/Close button
3. Stop button
4. Play/Pause button
5. IR Sensor
6. LCD Display
7. USB Port
8. Power button



Rear Display


1. Y/Cr/CB socket
2. Video
3. Audio Left
4. Audio Right
5. Coaxial
6. S-Video
7. Optical

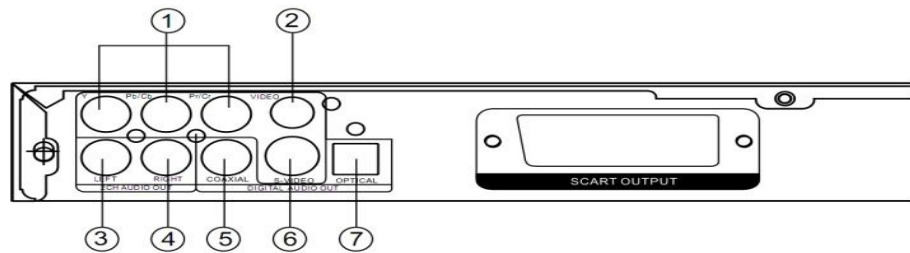

CONNECTING TO YOUR TV/ AMPLIFIER

To connect your DVD player to your TV you have a choice of three connections – scart, AV or RGB, select one of these and using the appropriate cable connect securely using the correct sockets on both the DVD and your TV. Once connected select the correct video mode on your TV and the correct output mode on the DVD.

You can also connect your DVD player to an Audio system using the audio sockets on the DVD player labelled socket 3 and 4

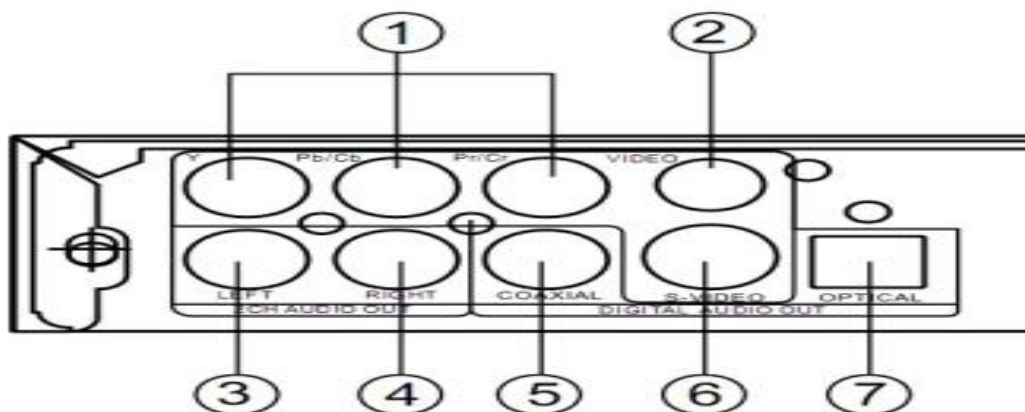




DVD Operation/ USB Operation

DVD Operation

Once your DVD player is connected to your TV it is ready for operation.

Press the power button on the DVD player and ensure your TV is in the correct video mode. Press the 'OPEN/CLOSE' button to eject the DVD tray and insert a disc then press the 'OPEN/CLOSE' button to close the tray. Your disc will load automatically after a few seconds and go to the root menu of the DVD use the direction keys on the remote to navigate through the menu and press the 'ENTER' button to confirm your selection.

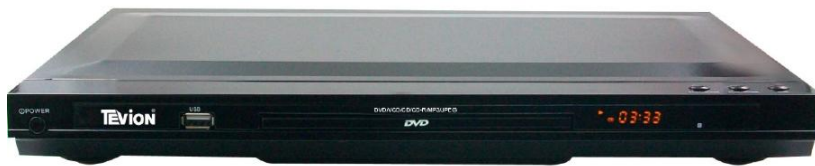

USB Operation

You can also use a USB device via the DVD player


To operate a USB device connect through the USB port on the DVD player ensure no disc is inserted during USB operation. Press the 'DVD/USB' button and select USB from the OSD and press 'ENTER' to confirm, after a few seconds USB will load and your files will appear on screen as shown below.



To select a file use the direction keys on the remote control to navigate through your folders and 'ENTER' to confirm selection, press the title button at any time to return to main menu.

JPEG OPERATION

To view JPEG files via the DVD player insert either your JPEG disc or USB device, after loading, the files will appear as shown below.

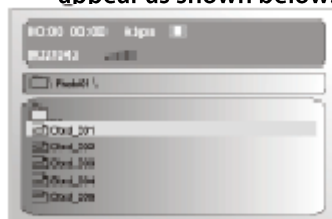

To select a file use the direction keys on the remote control and the 'ENTER' button to confirm choice your image will then display on screen and skip from picture to picture. You also can use the direction keys to rotate your picture on screen.

For full instructions please refer to the user guide