


## FEATURES & ACCESSORIES

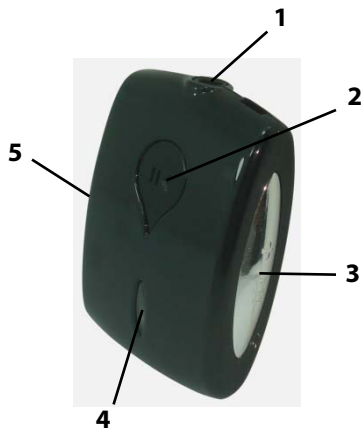

### Button Functions

- 1 – Headphone Jack
- 2 – Play / Pause Button
- 3 – Volume + / Skip Next
- 4 – LED Indicator
- 5 – Volume - / Skip back

### Accessories



1 x Headphones



1 x USB Cable

## BUTTON OPERATION

Long press powers ON/OFF. Short press while playing will pause the music.

**PLEASE NOTE: The Headphones must be connected in order for the player to turn on. Once the player has been turned on, press the "Play/Pause" button again to start the music playing.**

### Volume + / Skip Next:

Long press adjusts the volume, short press skips to the next track.

### Volume - / Skip Back:

Long press adjusts the volume, short press skips to the previous track.

## COPYING MUSIC TO YOUR PLAYER

You can transfer music onto your MP3 player by using Windows Media Player. The latest version of Media Player is version 11. To check what version you are running, open Windows Media Player and click the "Help" tab and "About Windows Media Player", or "Check for Updates". After opening Windows Media Player, connect your MP3 player to your PC. Use the Sync tab to select which music files you want to put on the MP3 player, then click the "Start Sync" button. Once synchronisation is complete, you will see a note on the right-hand side of Media Player saying "You can now disconnect your player".

**PLEASE NOTE: Windows Media Player has a "Copy Protect Music" function. When transferring music onto your player please ensure that the music is not copy protected otherwise the music will not play on the player. You can check to see if the "Copy Protect Music" is enabled by opening Windows Media Player>Tools>Options>Rip Music. If it is enabled you will need to disable the function, delete your music library and re-rip your CD's.**

For full instructions, please refer to the user manual