

TEVION[®]
SOUND



TRAVEL SPEAKER

Users Guide

Congratulations on the purchase of your new Travel Speaker. As well as your 3 year parts and labour warranty you have the added peace of mind of dedicated help lines and web support.

AFTER SALES SUPPORT

UK/N.IRELAND HELPLINE NO 01270 508538

REP. IRELAND HELPLINE NO 1800 995 036

WEB SUPPORT WWW.QUESH.CO.UK

MODEL NUMBER: 45302

Contents

I

- 02. Welcome Section
- 03. General Information and Safety Instructions
- 04. Battery Handling and Usage
- 05. Accessories
- 06. Features & Functions
- 07. Getting Started
- 08. Frequently Asked Questions / Technical Information
- 09. Warranty Card
- 10. Fault Report Card

Helpline No. UK/N.Ireland: 01270 508538 Rep. Ireland: 1800 995 036
Web Support www.qesh.co.uk
Model Number: 45302

I

Congratulations!

You have made an excellent choice with the purchase of this quality Tevion® brand product. By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Aldi.

We want you to be completely satisfied with your purchase so this Tevion® product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline. We hope you will enjoy using your purchase for many years to come. If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled

General Information and Safety Instructions

3

Please read this manual before use.

1. Never attempt to repair this unit yourself. Opening the unit will invalidate the warranty.
2. Keep away from fire.
3. Do not expose this product to water, rain or dampness.
4. Avoid exposure to direct sunlight and other heat sources.
5. Keep away from strong magnets.
6. Ensure this product is disconnected from mains power before cleaning.
7. Charge the battery for one hour before first use.
8. Recharge the battery if the unit suddenly powers off.
9. Always switch off the unit when not in use to preserve battery life.
10. Discharge completely from time to time to prolong battery life.

Helpline No. UK/N.Ireland: 01270 508538 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 45302

3

Battery Handling and Usage

4

Battery Safety

- Never throw batteries into fire or expose to excessive heat sources.
- If batteries are swallowed, please seek immediate medical attention.
- Ensure correct +/- polarity when installing batteries.
- Do not recharge non-rechargeable batteries.
- Do not combine old and new batteries.

Battery Installation

- Open the battery compartment door on the rear side of the speaker.
- Insert the Li-ion rechargeable battery into the battery compartment ensuring the gold metal tabs on the battery meet the gold metal pins on the speaker.
- Close the battery compartment door.



Do not dispose of batteries in your household waste.
Please contact your local authority for details on safe disposal.

Helpline No. UK/N.Ireland: 01270 508538 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 45302

4

Disposal of Your Old Product

Electric and electronic equipment (EEE) contains materials, parts and substances which can be dangerous to the environment and harmful to human health. Once this appliance has reached the end of its life span, the unit in its entirety should be taken to a recycling centre. Please contact your local authority for details of recycling schemes in your area.



Do not dispose of this product in your household waste. Please contact your local authority for details of recycling schemes in your area.

Accessories

5

- USB mains power adaptor
- Rechargeable Li-ion battery
- USB cable
- Aux cable
- Wristband

Helpline No. UK/N.Ireland: 01270 508538 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 45302

6

Features & Functions

6


- Slimline design portable speaker
- Connect any audio device through Aux In (iPod, MP3 player)
- SD card reader
- USB port
- Mini USB for power recharge
- 3.5mm earphone jack
- 2 x 2.5W speakers
- MP3 playback (thru SD card or USB)
- Rechargeable battery
- Frequency response 100Hz – 20KHz

Helpline No. UK/N.Ireland: 01270 508538 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 45302

7

Features & Functions

6

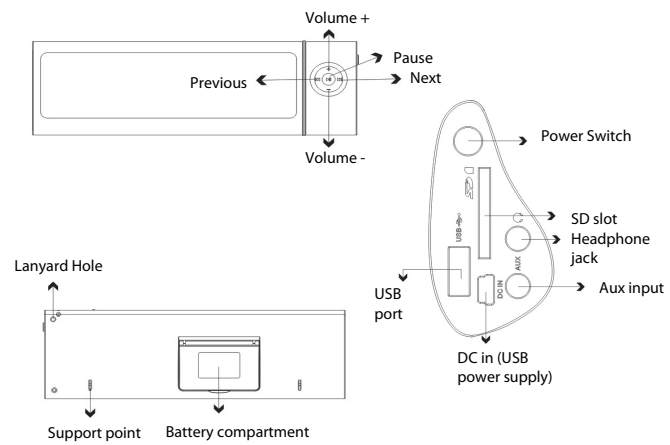

Helpline No. UK/N.Ireland: 01270 508538 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 45302

8

Basic Operation

The speaker can be powered either by the USB mains adaptor (supplied), or the rechargeable battery (supplied). The battery should be charged for around one to two hours for full charge. Use the supplied USB cable to charge the battery either by connecting to the USB mains adaptor or by connecting to a USB port on either a PC or laptop computer.

Press the power button to turn on the speaker.

USB / SD card

Insert either USB device or SD card into the relevant input. The speaker will begin to play automatically. Use the fast forward and fast reverse buttons on the speaker to move to the next or previous track.

Please note, the USB and SD card slot can only support MP3 file format. Any other format and the speaker will not play.

Getting Started

7

Aux Input

Connect MP3 player or other audio device using the 3.5mm line in cable supplied. Play the device in the normal way and the music will play through the speaker.

PC / Laptop Connection

Use the supplied line-In cable to connect to the AUX input of the speaker and the earphone socket on your laptop or PC.

Please note, when using the AUX In, playback and volume are controlled by your device and not the controls on the speaker.

Helpline No. UK/N.Ireland: 01270 508538 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 45302

10

1. Why won't the speaker power on? Please ensure the battery is charged or the speaker is connected to mains power supply.
2. Why won't music play back when using USB or SD card slot. Ensure the music is in MP3 format.
3. Why don't the controls on the speaker work when using AUX device. The AUX device controls the sound and playback when using AUX mode.
4. Why does my speaker suddenly power off. Ensure the battery is charged or the speaker is connected to mains power supply.

Technical Information

- Rated voltage: 5W
- Rated power: 2 x 2.5W
- Speaker Unit: 2 x 1.5"
- Impedance: 4 ohm
- USB 2.0
- Dimensions: 218x70x37mm



TRAVEL SPEAKER

WARRANTY CARD

Congratulations! You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defeats due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that: -

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were not carried out by any other than the authorised workshop

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This does not affect your statutory rights.

The purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

Should your item become defective during the warranty period, in the first instance, please call our customer service centre, they will then inform you of what to do next. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair: -

- 1.Receipt (proof of purchase)
- 2.This warranty certificate and fault report card complete with your contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs to the address stated below. Quotes as well as repairs after the warranty period are to be paid in all cases.

Ensure that the product is well packed as no responsibility can be accepted for items lost or damaged in transit. This warranty does not affect your statutory rights.





TRAVEL SPEAKER

FAULT REPORT CARD

Name _____

Address _____

Email _____

Contact Tel No _____

Model Number **45302**

Fault Description _____

SERVICE HELPLINE

UK/N.Ireland 01270 508538 – Rep.Ireland 1800 995 036
www.quesh.co.uk

Qesh Ltd, 1 Solway Court, Crewe Business Park, CW1 6LD