




MULTIMEDIA ALARM CLOCK RADIO

Quick Set-Up Guide


FUNCTIONS AND DISPLAY

1. Skip +/-
2. Vol +/-
3. SD card reader
4. iPod dock
5. USB input
6. Stop
7. Power ON/OFF
8. Play / Pause / Scan
9. Alarm 1
10. LCD display
11. Snooze
12. Remote sensor
13. Alarm 2
14. Memory set
15. Speaker
16. AC power supply
17. Aux in jack
18. Stereo headphone jack
19. FM soft antenna
20. Not applicable
21. Alarm ON/OFF

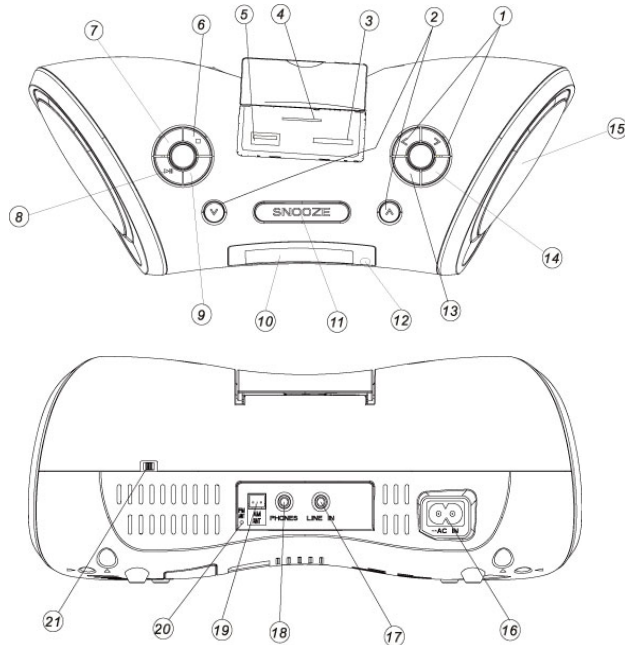

REMOTE CONTROL

- | | |
|--|--------------|
| 1. Power ON/OFF | 9. Repeat |
| 2. Play / Pause / Scan | 10. Menu |
| 3. Stop | 11. Select |
| 4. Memory / set | 12. Skip +/- |
| 5. Random | 13. Mode |
| 6. Volume +/- | |
| 7. Mute | |
| 8. Folder +/-, Memory +/-, iPod scroll up / down | |

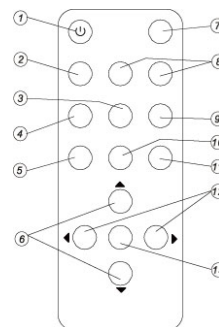

SETTING UP YOUR MULTIMEDIA ALARM CLOCK RADIO

Connect the mains power adaptor to your household mains power outlet socket and the other end into the mains power input at the rear of the unit. Switch on the mains power supply and then press the ON/OFF button located on the top of the unit.

Press the MODE button to select between RADIO, IPOD, USB, CARD, AUX. Once in the desired mode, connect your device (IPOD, USB drive, SD/MMC Card) and play will begin automatically.

For radio operation, ensure RADIO is selected from the mode menu. Extend the soft antenna wire from the back of the unit. Press and hold the SCAN button until the frequency on the LCD display starts to search, then release the SCAN button. The tuner will scan up and down the frequency and will store stations automatically when they are found.

PLEASE REFER TO THE USER MANUAL FOR FULL INSTRUCTIONS.

Helpline No. UK/Northern Ireland: 01270 508538 Rep. Ireland: 1800 995 036

Web Support: www.qesh.co.uk

Model Number: 45465