


TEVION[®] 7" PORTABLE DVD PLAYER

VISION Quick Set-Up Guide

Please study this guide. It is designed to help you to start using your Tevion[®] DVD player quickly and efficiently.


REMOTE CONTROL FUNCTIONS

The remote control requires 2 x AAA batteries (supplied). Slide off the back cover and insert batteries ensuring the correct +/- polarity. Slide the cover back on until it clicks into place. Always ensure to point the remote control directly at the infra-red sensor on the front of the DVD player.

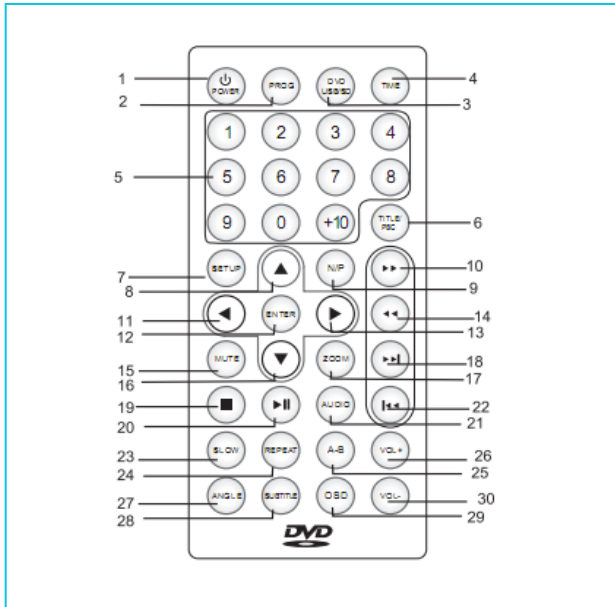


- | | |
|-----------------|-----------------|
| 1 Power | 16 Down arrow |
| 2 Program | 17 Zoom |
| 3 DVD/USB/SD | 18 Next |
| 4 Time | 19 Stop |
| 5 Numeric keys | 20 Play / pause |
| 6 Title / PBC | 21 Audio |
| 7 Setup | 22 Previous |
| 8 Up arrow | 23 Slow |
| 9 N/P | 24 Repeat |
| 10 Fast forward | 25 A-B repeat |
| 11 Left arrow | 26 Volume + |
| 12 Enter | 27 Angle |
| 13 Right arrow | 28 Subtitle |
| 14 Fast rewind | 29 OSD |
| 15 Mute | 30 Volume - |


DVD FUNCTIONS

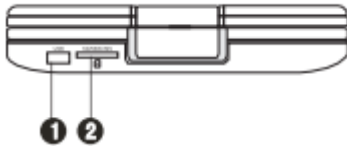

- 1 USB port
- 2 SD/MMC card reader

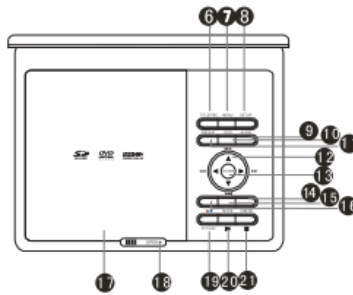


- 6 N/P
- 7 Disc door
- 8 Open
- 9 TFT off
- 10 Play / pause
- 11 Stop

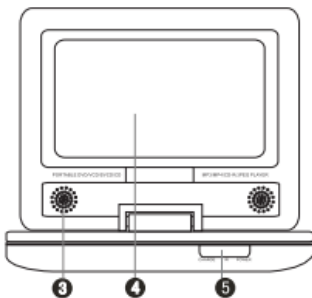

- 3 Speaker
- 4 LCD display
- 5 Infra-red

- 6 Title / PBC
- 7 Menu
- 8 Setup
- 9 Audio
- 10 On screen display
- 11 Repeat
- 12 Direction keys
- 13 Enter
- 14 USB / SD Mode
- 15 Mode

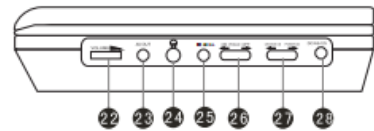

- 22 Volume control
- 23 AV out jack
- 24 Earphone jack
- 25 Coaxial
- 26 Hold ON / OFF
- 27 Charge / power ON
- 28 DC in jack

TEVION[®] 7" PORTABLE DVD PLAYER

VISION Quick Set-Up Guide

ACCESSORIES



Remote control



Headrest carry case



Earphones



Mains power adaptor



Carry case straps



AV cable



Car adaptor

DVD OPERATION

1. Before use, open the disc cover and carefully remove and discard the white card tab from inside the deck.
2. Remove all transparent protection film from the player, including the display screen.
3. Ensure the 'Charge / Power' switch on the right-hand side of the player is set to 'Charge'.
4. Connect the mains power adaptor to the DC-in socket and charge fully for 6 hours.
5. Once the player is fully charged slide the 'Charge / Power' switch to 'Power', open the disc cover and carefully insert a DVD (label side facing up) until it clicks into place. Close the disc cover and the DVD will load automatically.
6. Your DVD menu screen will appear. Use the directional arrow keys and enter button for your required selection.
7. Please refer to the user manual for a list of compatible disc playback formats.

USB / SD Mode

1. The USB input and SD/MMC card slot can be used for movie, music or photo playback.
2. Insert either a USB device or SD/MMC card into the relevant slot at the back of the player.
3. If Media is inserted in both the USB port and SD/MMC card slot then you can select which input source you require by pressing the MODE button on the remote control or the USB/SD button on the DVD player. Use the directional arrow keys to highlight your selection and press ENTER to confirm.
4. Please refer to the user manual for a list of compatible formats.

LCD TFT Display

The display screen on this player can be rotated 90 degrees right and 180 degrees left. When rotated 180 degrees left the screen can then be folded to lie completely flat. Always use special care when rotating the screen to avoid unnecessary damage to the mechanism.

Maintenance & Care

If used correctly and handled with care, this DVD player will serve you for many years. If however, you should experience any difficulties, please call our customer support team on the number below.

For full instructions, please refer to the user manual.