



4GB MINI MP3 PLAYER

Users Guide

Now you have purchased a Tevion® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated helplines and web support

AFTER SALES SUPPORT

UK/N.IRELAND HELPLINE NO 0844 635 0008

REP. IRELAND HELPLINE NO 1800 995 036

WEB SUPPORT WWW.QUESH.CO.UK

MODEL NUMBER: 42623

Contents

I

- 02. Welcome Section
- 03. General Information and Safety Instructions
- 04. Battery Safety
- 05. Accessories
- 06. Features & Functions
- 07. Getting Started
- 08. Frequently Asked Questions
- 09. Warranty Card
- 10. Fault Report Card

Helpline No. UK/N.Ireland: 0844 635 0008 Rep. Ireland: 1800 995 036
Web Support www.qesh.co.uk
Model Number: 42623

I

Congratulations on choosing to buy a Tevion® product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of Europe's leading manufacturers.

All products brought to you by Tevion® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 year warranty.

We hope you enjoy using your purchase for many years to come.

Please read this User Manual carefully before use.

1. Never attempt to repair the player yourself. Opening the unit will invalidate the warranty.
2. To avoid risk of explosion, do not throw the product into fire.
3. Do not immerse into water or allow to become wet.
4. Avoid exposure for prolonged periods to direct sunlight.
5. Charge the battery for 4 hours before first use and ensure the power switch is set to **OFF**.
6. The player will start charging immediately it is connected to a PC.
7. Recharge the battery if the player suddenly 'powers off' or the buttons do not respond.
8. Always switch **OFF** the player when not in use to preserve the battery.
9. Discharge completely from time to time to prolong battery life.
10. Do not unplug the USB cable during file download. This may cause malfunction to your player or PC.
11. Do not attempt to connect earphones or audio cable during file download.

Battery Safety

4

Never throw batteries into fire or expose to excessive heat sources. The rechargeable battery inside this unit cannot be replaced.

Disposal of Your Old Product

Electric and electronic equipment (EEE) contains materials, parts and substances which can be dangerous to the environment and harmful to human health. Once this appliance has reached the end of its life span, the unit in its entirety should be taken to a recycling centre. Please contact your local authority for details of recycling schemes in your area.



Do not dispose of this product in your household waste. Please contact your local authority for details of recycling schemes in your area.

Helpline No. UK/N.Ireland: 0844 635 0008 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 42623

4

Accessories

5



In ear earphones



Around neck earphones



USB cable

Helpline No. UK/N.Ireland: 0844 635 0008 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 42623

5

Features & Functions

6


- 4GB Intel® flash memory
- Music playback formats MP3 / WMA
- High speed USB 2.0
- Data storage device
- Built in rechargeable lithium battery
- Up to 8 hours music playback
- 3.5mm earphone Jack
- Mini USB Input socket
- Supports Win98 (driver download required), 2K, XP, VISTA, Windows®7
- Handy 'clip-on' design
- Dimensions 44 x 12 x 29 (W x D x H)

Helpline No. UK/N.Ireland: 0844 635 0008 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 42623

6

Features & Functions

Power ON/OFF Switch

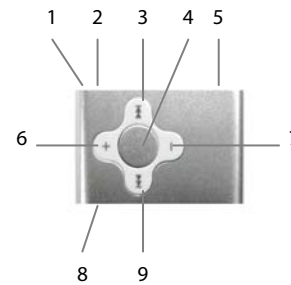

1. LED charge display
2. ON/OFF switch
3. Previous song
4. Play/pause button
5. Mini USB port
6. Volume +
7. Volume -
8. LED playback display
9. Next song

Features & Functions

Button Operation

- PLAY: Long press powers ON/OFF. Short press while playing will pause the music.
- NEXT SONG: Long press fast forward. Short press next song and play
- PREV SONG: Long press fast reverse. Short press previous song and play
- VOLUME + Long press continuous volume up. Short press stepped volume up.
- VOLUME - Long press continuous volume down. Short press stepped volume down.

Power ON/OFF

Please note, in order to switch on your MP3 player, slide the power switch to ON then press and hold the play button for approx 5 seconds

LED Indicators

There are two LED indicators on the player. The top one next to the ON/OFF switch is the battery indicator, and the green one at the bottom flickers during music playback and remains lit when music is paused.

Connecting to a PC

1. The power switch can be set to ON or OFF but will only charge the battery in the **OFF** position.
2. Connect your MP3 player to your PC using the USB cable supplied and charge for 4 hours before first use.
3. When you connect the MP3 player to your PC, you will notice a small icon with a green arrow appear on the bottom right-hand side of your desktop toolbar. This denotes connection of a USB device.
4. Double click 'My Computer' icon and you will see a 'Removable Disk' in the list of drives on the left-hand side. That is your MP3 player.
5. To ensure safe removal of your MP3 player from your PC. Click the small icon with the green arrow and single left click the drive you wish to remove. A dialogue box will appear confirming it is safe to remove the device.

Getting Started

Adding Music (MP3/WMA) Files to Your Player

The easiest way to put music files onto your player is by 'Drag and Drop'. Connect your MP3 player to your PC, then using 'windows explorer' or 'My Computer' select the music file or folder you wish to copy to your MP3 player by right clicking and holding the mouse button down whilst dragging the selected file over the 'Removable Disk'. Release the mouse button and a small dialogue box will appear, click copy with the left mouse button, and the file will be copied to your MP3 player.

Syncing with Windows Media Player

The most recent edition of Windows Media Player is version 11. To check what version you are running, open Windows Media Player and click the 'Help' tab and 'About Windows Media Player', or 'Check for Updates'. After opening Windows Media Player, connect your MP3 player to your PC. You will see a dialogue box asking you to rename your device. This can be any name of your choice. Follow the 'on screen' instructions. Use the Sync tab to select which music files you want to put on the MP3 player, then click the 'Start Sync' button. Once synchronisation is complete, you will see a note on the right-hand side of Media Player saying 'You can now disconnect your player'.

Getting Started

Once you have set up a device for the first time, you can then configure Windows Media Player to sync your MP3 player automatically each time it is connected to your PC. To do this, click the small arrow underneath the 'Sync' tab and select your device. From the sub menu, select 'Set up Sync'. Click the box 'Sync this device automatically. This also gives you the option to add or remove tracks manually. For further assistance using Windows Media Player, please refer to the 'Help' menu.

Music Playback

1. Short press PLAY to play music and press PLAY again to pause.
Note: The player will auto power off if left on pause for more than one minute. This is to preserve the battery.
2. Press NEXT or PREVIOUS to play next or previous song.
3. Press VOL+ or VOL- to increase / decrease the volume.

USB Connection

Use the USB cable supplied to connect your MP3 player to your PC. The power switch should be set to OFF to charge the player. The unit will start charging automatically.

Frequently Asked Questions

8

Why won't my music play on my MP3 player?

Check that your songs are in the correct format. The player can only support MP3 and WMA.

My MP3 player keeps automatically switching off?

Ensure the battery has been fully charged. The player will also auto power off if left on 'pause' over one minute.

My PC won't display the 'Removable Disk' drive in My Computer?

Try using other USB ports on your computer, or try using another USB cable if available. If using windows 98 or ME, you must download the driver from the website at the bottom of this page.

My player is saying 'Disk Full' despite only having a few songs?

You may need to re-format your player. Right click 'Removable Disk' (MP3 player), then left click format. Ensure your music files are backed up before proceeding as this procedure will erase all of the music and data on your player.

Should you experience any other difficulties, please always call our customer support team in the first instance as most issues can be resolved quickly on the telephone.

Helpline No. UK/N.Ireland: 0844 635 0008 Rep. Ireland: 1800 995 036
Web Support www.quesh.co.uk
Model Number: 42623

12



4GB MINI MP3 PLAYER

WARRANTY CARD

Congratulations! You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defeats due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that: -

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were not carried out by any other than the authorised workshop

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This does not affect your statutory rights.

The purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

Should your item become defective during the warranty period, in the first instance, please call our customer service centre, they will then inform you of what to do next. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair: -

- 1.Receipt (proof of purchase)
- 2.This warranty certificate and fault report card complete with your contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs to the address stated below. Quotes as well as repairs after the warranty period are to be paid in all cases.

Ensure that the product is well packed as no responsibility can be accepted for items lost or damaged in transit. This warranty does not affect your statutory rights.





FAULT REPORT CARD

Name _____

Address _____

Email _____

Contact Tel No _____

Model Number **42623**

Fault Description _____

SERVICE HELPLINE

UK/N.Ireland 0844 635 0008 – Rep.Ireland 1800 995 036
www.quesh.co.uk

Qesh Ltd, 1 Solway Court, CW1 6LD