


## FEATURES & ACCESSORIES

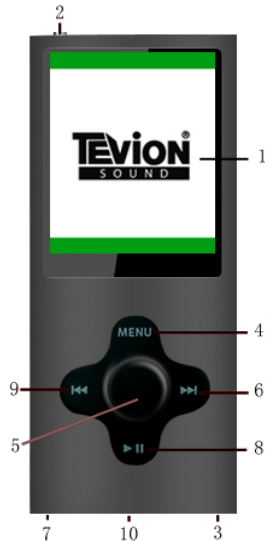

### Button Functions

- 1 - Display Screen
- 2 - ON/OFF Switch
- 3 - Earphone Jack
- 4 - Menu selection
- 5 - VOL/OK key
- 6 - Next song
- 7 - USB Port
- 8 - Play/pause/stop
- 9 - Previous song
- 10 Strap eyelet

### Accessories

- 2 x Sets earphones
- 1 x USB mains adaptor
- 1 x USB cable
- 1 x Silicone Pouch
- 1 x Elastic armband
- 1 x Software CD
- 1 x User manual

## GETTING STARTED

On the top of the video player there is a small ON/OFF switch. Slide to the ON position and connect to your PC. Windows 98 users should install the win98 driver from the software CD before connecting the video player to their PC. Please note, when the main power switch is set to ON, the Play/Pause button can be used to switch the player on and off by pressing and holding for a few seconds.



When the player is connected to a PC, it will appear as 'TEVION MP3' in the 'My Computer' folder.

### Transferring files to your video player

The easiest way to put music, video or photos onto your video player is by doing something called drag and drop. Simply locate your music, video or photo files then drag and drop (click and hold the left mouse button) them directly into the 'TEVION MP3'.

### Transferring using Window Media Player

Another way to copy music to your video player is by using Windows Media Player which is a standard application with all Windows PC's. Please ensure you are using the latest version of media player by clicking 'Help' on the menu bar and 'Check for updates'. When you connect your video player for the first time using media player you will be asked to name the device. It is a good idea to use a recognisable name i.e. 'Tevion' so it can be easily recognised during future use. For further assistance using windows media player please click the 'Help' tab or visit [microsoft.com](http://microsoft.com).

**For full instructions, please refer to the user manual**