
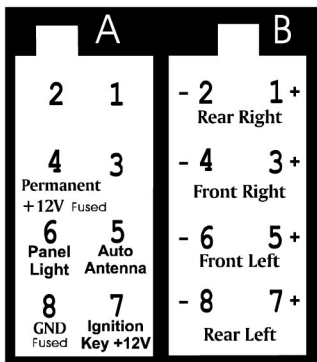


#### WIRING UP YOUR RADIO

**\*\*\*IMPORTANT\*\*\* Please make sure the yellow wire is connected to the permanent live feed (+12V) of the vehicle battery for the preset memories . Disconnect negative battery terminal from battery before starting installation , Consult the vehicle's owner's manual for proper instructions .**

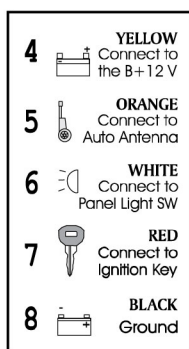

1. Install the Radio using the Din-Front Mount or Din-Rear Mount Method.
2. The Radio is equipped with ISO connector. ISO connector is the universal connector for the connection of car radio.
3. Make sure that you have a good chassis ground. Good ground connections will eliminate most electrical noise problems.
4. Please seek professional advice if you are inexperienced installing this type of product .

#### REMOTE CONTROL



1. Power on / off / Mute Sound Button
2. Volume +
3. Sound Select Key / Menu
4. Volume -
5. Number 2 / Intro Scan
6. Number 1 / Play / Pause
7. Number 5 / Folder Down
8. Number 4 / Random Play
9. Number 8 / TA Control
10. Number 7 / AF Control
11. Number 0
12. Number \*
13. Number 3 / Repeat Play
14. Stations Tune / Seek / Track Up
15. Number 6 / Folder Up
16. Stations Tune / Seek / Track Down
17. Number 9 / PTY Control
18. Mode
19. Number #
20. Band / ID3
21. Answer Button
22. Phone Button
23. Reject Button / Clock Display
24. F/PS

#### WORKING WITH THE UNIT

##### 1. Bluetooth Connection

Turn on the bluetooth function in your mobile phone . Press and hold SEL button for 3 seconds , press SEL button to cycle through to "pairing" . Press ANSWER button to connect bluetooth device . Search the device named "BT CAR STEREO" and input "0000" in your mobile phone to connect .

##### 2. CD Insert/Eject

Simply put your audio CD, or CD with MP3/WMA files into the disc slot of the radio. The unit will then play the contents of the CD automatically. Press the EJECT button to remove the CD.

##### 3. USB Flashdrive & SD Card

Simply plug your USB Flashdrive or SD Card (or both) into the USB socket / Card slot. The contents will be played automatically. These can be removed at any time.

\* The USB extension cable can also be used.

##### 4. Aux-in Jack

The front Aux-in Jack can be used for connecting additional audio devices (i.e. MP3 players / Ipods) to the unit. The Aux-in cable (supplied with the unit) can be used for this connection. Simply connect one end into the Aux-in Jack and the other to your MP3 / Ipod.

##### 5. Radio

Press the BND / ID3 / TEL button to select RADIO mode . Press the PTY / CLK button to select suitable band . You can press and hold the seek up / down button to search for your favourite stations, or you can press and hold the FPS button to automatically scan the strongest stations and save them as presets .

REFER TO THE USER GUIDE FOR MORE DETAILED INSTRUCTIONS