
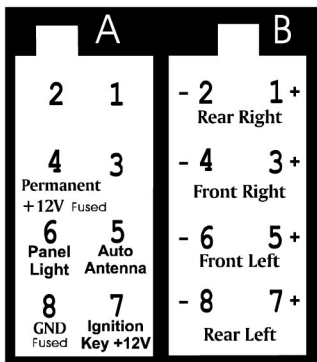


#### WIRING UP YOUR RADIO

**\*\*\*IMPORTANT\*\*\*** Please make sure the yellow wire is connected to the permanent live feed (+12V) of the vehicle battery for the preset memories. Disconnect negative battery terminal from battery before starting installation, Consult the vehicle owner's manual for proper instructions.

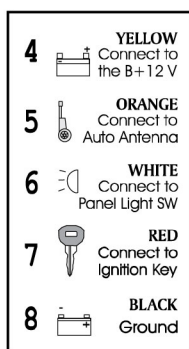

1. Install the Radio using the Din-Front Mount or Din-Rear Mount Method.
2. The Radio is equipped with ISO connector. ISO connector is the universal connector for the connection of car radio.
3. Make sure that you have a good chassis ground. Good ground connections will eliminate most electrical noise problems.
4. Please seek professional advice if you are inexperienced installing this type of product.

#### REMOTE CONTROL



1. Power on / off / Mute Sound Button
2. Volume +
3. Sound Select Key / Menu
4. Volume -
5. Number 2 / Intro Scan
6. Number 1 / Play / Pause
7. Number 5 / Folder Down
8. Number 4 / Random Play
9. Number 8 / TA Control
10. Number 7 / AF Control
11. Number 0
12. Number \*
13. Number 3 / Repeat Play
14. Stations Tune / Seek / Track Up
15. Number 6 / Folder Up
16. Stations Tune / Seek / Track Down
17. Number 9 / PTY Control
18. Mode
19. Number #
20. Band / ID3
21. Answer Button
22. Phone Button
23. Reject Button / Clock Display
24. F/PS

#### WORKING WITH THE UNIT

##### 1. Bluetooth Connection

Turn on the bluetooth function in your mobile phone. Press and hold SEL button for 3 seconds, press SEL button to cycle through to "pairing". Press ANSWER button to connect bluetooth device. Search the device named "BT CAR STEREO" and input "0000" in your mobile phone to connect.

##### 2. CD Insert/Eject

Simply put your audio CD, or CD with MP3/WMA files into the disc slot of the radio. The unit will then play the contents of the CD automatically. Press the EJECT button to remove the CD.

##### 3. USB Flashdrive & SD Card

Simply plug your USB Flashdrive or SD Card (or both) into the USB socket / Card slot. The contents will be played automatically. These can be removed at any time.

\* The USB extension cable can also be used.

##### 4. Aux-in Jack

The front Aux-in Jack can be used for connecting additional audio devices (i.e. MP3 players / Ipods) to the unit. The Aux-in cable (supplied with the unit) can be used for this connection. Simply connect one end into the Aux-in Jack and the other to your MP3 / Ipod.

##### 5. Radio

Press the BND / ID3 / TEL button to select RADIO mode. Press the PTY / CLK button to select suitable band. You can press and hold the seek up / down button to search for your favourite stations, or you can press and hold the FPS button to automatically scan the strongest stations and save them as presets.

REFER TO THE USER GUIDE FOR MORE DETAILED INSTRUCTIONS